

Wireless Range Extender INW5000

User Manual



ISY

simply connected

1. Safety Precautions.....	5
2. Overview	6
2.1 Product Introduction.....	6
2.2 Packing List.....	6
3. Mode Introduction.....	7
3.1 Bridge Mode.....	7
3.2 Router Mode.....	7
3.3 Wireless Universal Repeater/WDS Mode.....	7
3.4 Client Mode	7
4. Hardware Description and Installation.....	8
4.1 Hardware Description.....	8
4.1.1 Front Panel and LED Status.....	8
4.1.2 Rear/Side Panel and Interface Description	10
4.2 Hardware Installation.....	11
4.2.1 System Requirements.....	11
4.2.2 Before You Begin.....	11
4.3 Operation Range.....	11
5. Configuring Your Computer and Wireless Connection	12
5.1 Configuring Your Computer.....	12
5.2 Configuring Wireless Configuration.....	15

6. Configuring ISY Wireless Range Extender	16
6.1 Bridge Mode Configuration.....	17
6.2 Router Mode Configuration	18
6.3 Repeater Mode Configuration.....	20
6.4 WDS Mode Configuration.....	22
6.4.1 Repeater Configuration in the WDS Mode.....	22
6.4.2 Central Base Station Configuration in the WDS Mode.....	23
6.4.3 WDS Application.....	24
6.5 Client Mode Configuration.....	26
7. Web Configuration general instructions	27
7.1 Running Status.....	27
7.1.1 Router Status	28
7.1.2 Clients List.....	29
7.2 Setup Wizard.....	29
7.3 Mode Setting	29
7.4 Network Settings.....	30
7.4.1 LAN Interface Settings.....	30
7.4.2 DHCP Server	31
7.4.2.1 Using the Router as a DHCP Server.....	31
7.4.2.2 Using Address Reservation.....	32
7.5 Wireless Settings.....	33
7.5.1 Wireless Basic Settings.....	33
7.5.2 Guest Network.....	38
7.5.3 Wireless Advanced Settings.....	40
7.5.4 WPS Setup.....	43
7.5.4.2 Using the Web Page.....	43
7.6 Management Function.....	45
7.6.1 Backup Settings	45
7.6.2 Reboot Router	47
7.6.3 Set Password.....	47
7.6.4 Router Upgrade.....	48

8. Web Configuration for the Bridge Mode.....49

8.1. Router Status.....	49
8.3 Mode Setting	50

9. Web Configuration for the Router Mode51

9.1.1 Router Status.....	51
9.2 WAN Interface Settings.....	53
9.3 WDS Function.....	58
9.4 Network Application.....	59
9.4.1 Port Forwarding.....	59
9.4.2 Port Triggering.....	61
9.4.3 UPnP	63
9.4.4 IGMP Proxying.....	64
9.4.5 DMZ Server	64
9.4.6 Dynamic DNS	65
9.4.7 Static Routes.....	66
9.5 Security Options.....	67
9.5.1 Block Sites.....	67
9.5.2 Block Services.....	69
9.5.3 Protection.....	71
9.6 Management Function	72
9.6.1 Backup Settings.....	72
9.6.2 Remote Management.....	73
9.6.3 Schedules.....	74
9.6.4 SNTP.....	75
9.6.5 Reboot Router.....	76
9.6.6 Set Password	76
9.6.7 Router Upgrade	77

10. Web Configuration for the Wireless Universal Repeater Mode.....78

10.1 Router Status.....	78
10.1.2 Clients List.....	79
10.2 Setup Wizard.....	79
10.3 Repeater Mode Setting.....	79
10.4. Wireless Universal Repeater.....	80
10.4.1 WPS Setup.....	80
10.4.1.1 Using the WPS Button	81
10.4.2 Using the Web Page.....	82
10.4.3 Wireless Client Function	86

11 Web Configuration for the WDS Mode 88

11.1 Router Status.....	88
11.3 Mode Setting.....	89

12 Web Configuration for the Client Mode.....92

12.1 Router Status.....	92
12.1.1 Clients List.....	93
12.2 Setup Wizard.....	93
12.3 Network Settings.....	93
12.4.2 Wireless Client Function	96

13 Appendix A FAQ97

1. Safety Precautions

Before operating ISY Wireless Range Extender,
read the following precaution information carefully:

Leave proper space for heat dissipation to avoid damage caused by device overheating. Heat dissipation holes enable the device to work normally. Do not cover heat dissipation holes.

Keep the device away from heat outlets or high temperature places.
Prevent the device from direct sunlight.

Keep the device in dry places. Do not spill any liquid on this device.

Do not connect the device to any PC or electronic product unless our customer engineer or your broadband provider instructs you to do this, because any wrong connection may cause power or fire risks.

Do not place this device on an unstable surface.

2. Overview

2.1 Product Introduction

Thank you for choosing the ISY Wireless Range Extender mini wireless router.

ISY Wireless Range Extender, a pocket router, is case-shaped, easy to carry, and easy to install. Its wireless transmission rate is up to 300 Mbps. It is a high-performance and IEEE802.11b/g/n-compatible network access device that can provide reliable and convenient network access service for individual users and SOHO (Small Office, Home Office). It features Web-based GUI, allowing users to easily modify settings to connect the device to ISP (Internet Service Provider) and conveniently perform upgrade using the WEB page.

In addition, ISY Wireless Range Extender has a three-way switch on the side panel that enables users to change the device's working mode among AP, Repeater, and Client. In the AP mode, the device functions as a wireless router to achieve wireless connection for the wired LAN. In the Repeater mode, the device provides the URM (Universal Repeater Mode) function for users to expand wireless coverage of the existing AP in a quick and easy way. In the Client mode, the device functions as a wireless network adapter but it can provide a better transmission and connection performance.

2.2 Packing List

Please check whether your packing list includes the following items:

- 1 x ISY Wireless Range Extender wireless router
- 1 x Ethernet cable
- 1 x Quick Installation Guide
- 1 x Warranty Card

3. Mode Introduction

3.1 Bridge Mode

In the Bridge mode, ISY Wireless Range Extender works as a wireless router to achieve wireless connection for the wired LAN.

3.2 Router Mode

In the Router mode, ISY Wireless Range Extender works as a domestic gateway.


3.3 Wireless Universal Repeater/WDS Mode

In the Wireless Universal Repeater/WDS mode, ISY Wireless Range Extender expands wireless coverage of the existing AP. Computers can connect to ISY Wireless Range Extender in either a wired or wireless way.

3.4 Client Mode

In the Client mode, ISY Wireless Range Extender provides Internet access for a set-top box or a computer with a network adapter.

4. Hardware Description and Installation

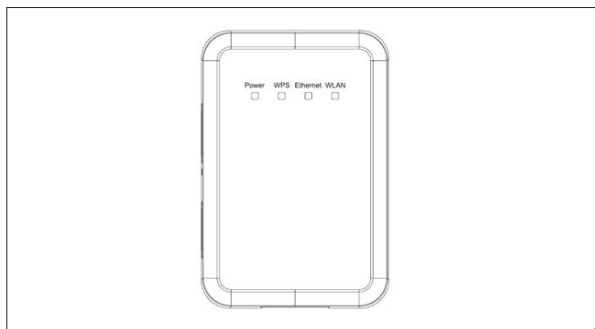

Front Panel and LED Status

4.1 Hardware Description


4.1.1 Front Panel and LED Status

There are 4 LED indicators on the front panel of ISY Wireless Range Extender. By observing their status, you can check whether the device runs normally.


INDICA-TOR	COLOR	STATUS	DESCRIPTION
POWER	GREEN	ON	THE DEVICE IS WORKING NORMALLY.
	RED	On	The system is in the process of self-inspection or fails the self-inspection. Or it is in the process of software upgrade.

INDICA-TOR	COLOR	STATUS	DESCRIPTION
WPS	Green	Off	The WPS session is down.
		On	The WPS indicator keeps on for 5 minutes after WPS (Wi-Fi Protected Setup) connection succeeds.
		Quick blink	A terminal is attempting to connect to the ISY Wireless Range Extender through WPS but fails.
		Quick blink with a certain interval	Multiple terminals are connecting to the ISY Wireless Range Extender through WPS at the same time. WPS sessions conflict.
		Slow blink	The WPS session is up.

INDICA-TOR	COLOR	STATUS	DESCRIPTION
ETHER-NET	GREEN	Off	THE ETHERNET PORT IS IN THE NON-COMMUNICATION STATE.
		On	The Ethernet port is in the communication state.
		Blink	The Ethernet port is transmitting and receiving data.
WLAN	Green	Off	The WLAN connection is in the non-communication state.
		On	The WLAN connection is in the communication state.
		Blick	Data is being transmitted and received in the WLAN.

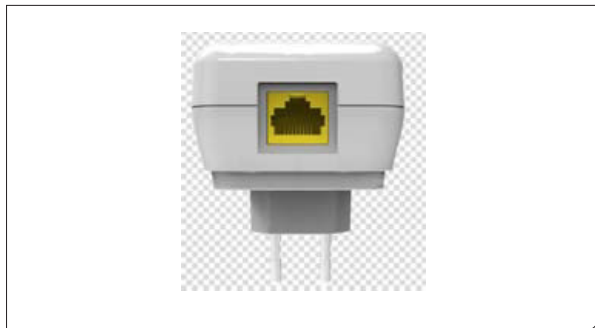

Rear Panel

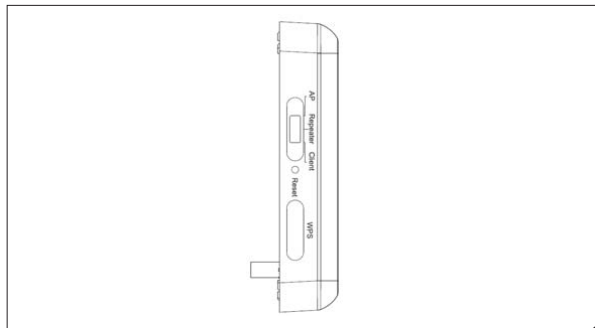

Side Panel

4.1.2 Rear/Side Panel and Interface Description

INTERFACE/BUTTON	DESCRIPTION
WAN/LAN	If ISY WIRELESS RANGE EXTENDER IS SET TO THE AP MODE, THE INTERFACE IS A WAN INTERFACE WHICH CONNECTS TO WAN OR UPLINK NETWORK DEVICES. If ISY WIRELESS RANGE EXTENDER IS SET TO THE REPEATER/CLIENT MODE, THE INTERFACE IS AN LAN INTERFACE.
Reset	Press the Reset button gently for 3-6 seconds and then release it. The system restores to the factory default settings.

INTERFACE/BUTTON	DESCRIPTION
AP/REPEATER/CLIENT	IT IS USED FOR SETTING ISY WIRELESS RANGE EXTENDER TO THE AP, REPEATER, OR CLIENT MODE. AP MODE—INCLUDING THE BRIDGE AND ROUTER MODES REPEATER MODE—TO EXPAND WIRELESS NETWORK COVERAGE CLIENT MODE—EQUIVALENT TO A WIRELESS NETWORK ADAPTER
WPS	For enabling WPS PBC mode. For more information, refer to WPS descriptions for each mode.

4.2 Hardware Installation

4.2.1 System Requirements

Before installing the device, please ensure that the following items are available:

- At least one Ethernet RJ45 cable (10Base-T/100Base-T)

- One ISY Wireless Range Extender wireless router

- A PC is already installed with the TCP/IP protocol and the PC can access the Internet.

4.2.2 Before You Begin

Before you install the device, please pay attention to the following items:

- The Ethernet cables that are used to connect the device to a computer, hub, router, or switch should be less than 100 meters.

- Do not place this device on an uneven or unstable surface. Do not put this device on the ground.

- Keep the device clean. Prevent the device from direct sunlight. Avoid any metal in the device.

- Place the device in the center of the area to optimize the wireless coverage.


4.3 Operation Range

The operation range of ISY Wireless Range Extender depends on the actual environment. The path and effect of signal transmission vary with the deployment in a house or an office. For example, the outdoor straight transmission distance for a certain device can reach 300 meters and the indoor transmission distance can reach 100 meters.


5. Configuring Your Computer and Wireless Connection

5.1 Configuring Your Computer


The following takes Windows XP as an example. Do as follows to manually set the network adapter:

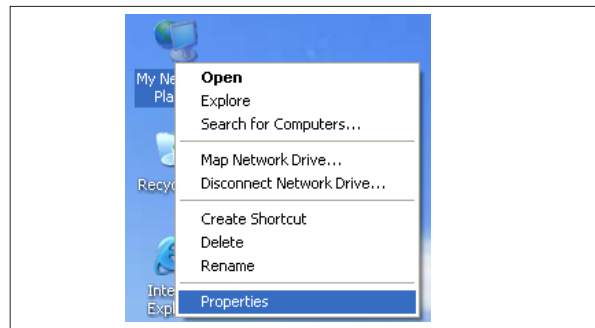


Step 1 Right-click the icon of My Network Places and choose Properties to display the Network Connections window.

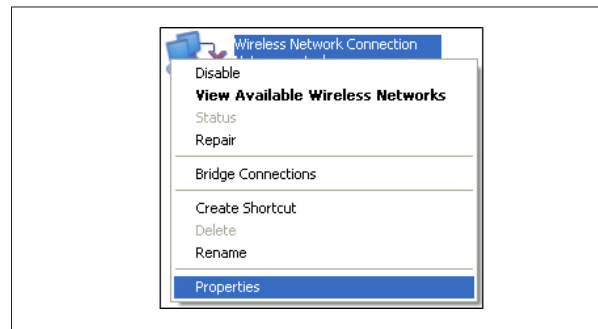

Step 2 Right-click the icon of a network interface card or wireless networkadapter and choose Properties. (Note: In the Client mode, computers can connect to ISY Wireless Range Extender through an Ethernet cable only.)


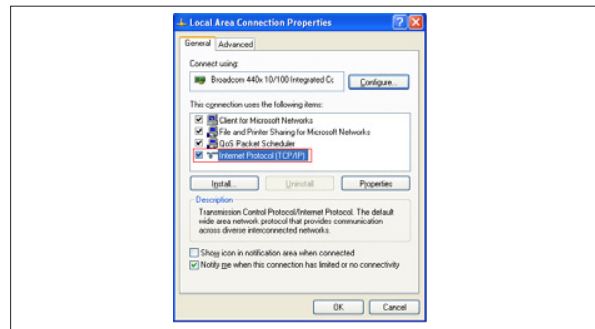


Step 3 Double-click Internet Protocol (TCP/IP).

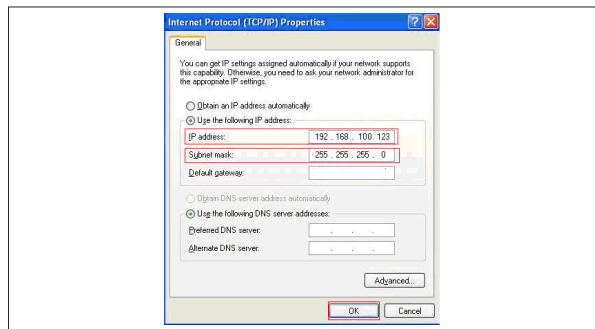

- Step 4**
- 1 When ISY Wireless Range Extender is set to the Router mode, select Obtain an IP address automatically.
 - 2 When ISY Wireless Range Extender is set to other modes, set the IP address of your computer to 192.168.100.X (X is an integer in the range of 2 to 253), and the MAC address to 255.255.255.0. Set the gateway and the IP address of the DNS server. You can leave them blank if you do not know information about the gateway and DNS server. Click OK.

Note: After you finish configuring ISY Wireless Range Extender, the domestic gateway can set the Internet protocol for the PC's network adapter. Set the IP address and DNS server to Obtain an IP address automatically as shown in the figure above.

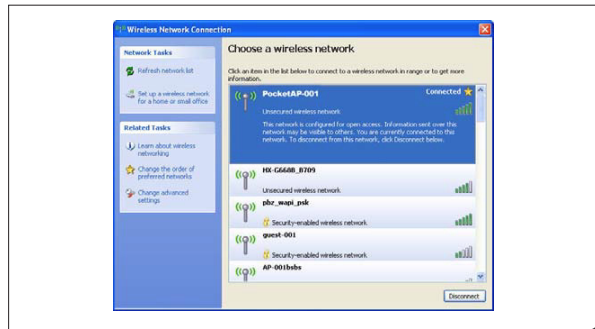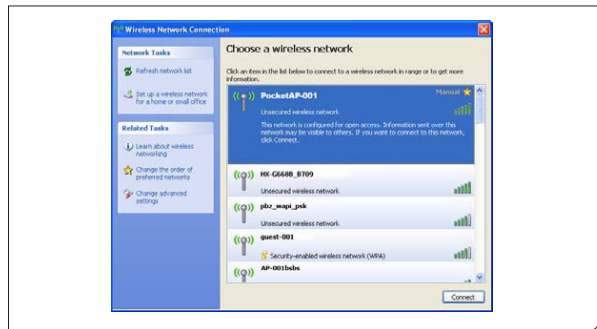

5.2 Configuring Wireless Configuration

The following takes Windows XP as an example. Do as follows to connect the wireless network adapter of your PC to ISY Wireless Range Extender:


- Step 1** Click the icon displayed at the right bottom corner of the desktop (Note: Ensure that your PC is installed with a wireless network adapter).
- Step 2** In the Wireless Network Connection page, double-click the desired wireless network.

Step 3 Your computer successfully connects to the wireless network when Connected is displayed on the right upper corner.

Note: The default SSID of ISY Wireless Range Extender is ISY AP-001.


6. Configuring ISY Wireless Range Extender

MODE ON THE CASE	MODE AVAILABLE IN THE WEB	MANAGEMENT IP ADDRESS	SUBNET MAC ADDRESS	DHCP	Way of connecting to PC
AP	BRIDGE (DEFAULT)	192.168.100.254	255.255.255.0	Disable	Ethernet cable /Wireless
	ROUTER			Enable	Wireless only
Repeater	Wireless Universal Repeater (default)	192.168.100.254	255.255.255.0	Disable	Ethernet cable /Wireless
	WDS				
Client	Client (default)	192.168.100.254	255.255.255.0	Disable	Ethernet cable only

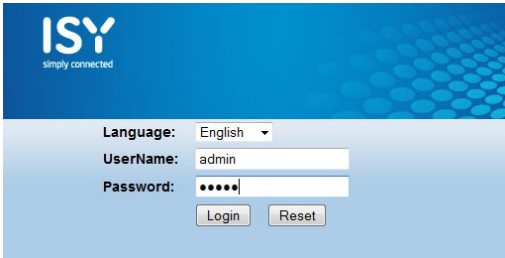

The image shows the ISY login interface. At the top left is the ISY logo with the tagline 'simply connected'. Below the logo, there are three input fields: 'Language:' with a dropdown menu set to 'English', 'UserName:' with the text 'admin', and 'Password:' with six dots. At the bottom of these fields are two buttons: 'Login' and 'Reset'.

- Step 1** Set the three-way switch on the case of ISY Wireless Range Extender to the mode you want.
- Step 2** Run the Internet Explorer (IE). Enter the management IP address of 192.168.100.253 and press Enter. In the login window that is displayed, enter the user name and password (both admin), and click Login.
- Step 3** Configure parameters for the mode you selected. Terminal devices can access the network through ISY Wireless Range Extender after you finish configuration by following procedures in the sections below.

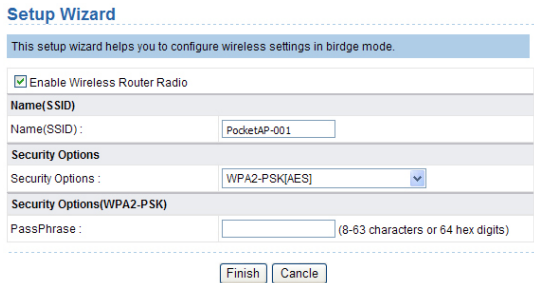

The image shows the 'Setup Wizard' configuration page. The title is 'Setup Wizard'. Below the title is a blue banner that says 'This setup wizard helps you to configure wireless settings in bridge mode.' The main content area has a light blue background and contains the following sections:

- Enable Wireless Router Radio**: A checkbox that is checked.
- Name (SSID)**: A text input field containing 'PocketAP-001'.
- Security Options**: A dropdown menu set to 'WPA2-PSK[AES]'.
- Security Options(WPA2-PSK)**: A text input field for the passphrase, with a note '(8-63 characters or 64 hex digits)' to its right.

At the bottom of the page are two buttons: 'Finish' and 'Cancel'.

6.1 Bridge Mode Configuration

- Step 1** Set the three-way switch on the side panel to AP after ISY Wireless Range Extender is powered on. Log in to the configuration page after the system is started.
- Step 2** Click Setup Wizard in the navigation bar on the left pane of the page. Set the SSID and encryption password and note them down. Click Finish to complete the settings.

The screenshot shows the 'Setup Wizard' interface. The first screen, titled 'Dynamic IP (DHCP) detected', states 'Successfully detected the type of Internet connection you have' and has 'Back' and 'Next' buttons. An arrow points from 'Next' to the second screen, 'Dynamic IP Address'. This screen has a text input field for 'Account Name (if Required)' and 'Apply' and 'Cancel' buttons. A callout box points to the input field with the text: 'Enter the account name provided by your ISP. Leave it blank if your ISP does not provide the account name.'

Parameter configuration for DHCP

The screenshot shows the 'Setup Wizard' interface for static IP configuration. The first screen, titled 'Static IP (Fixed) detected', states 'Successfully detected the type of Internet connection you have' and has 'Back' and 'Next' buttons. An arrow points from 'Next' to the second screen, 'Static IP (Fixed) Addresses'. This screen has a blue header and contains instructions: 'Your Internet service provides the static IP (Fixed) settings. Be sure to enter the correct IP address for each static IP settings. For example, be sure to enter the Gateway IP address in the Gateway Address field and the IP address in the IP Address field without moving them up.' It features several input fields: 'Internet IP Address' (IP Address, IP Subnet Mask, Gateway IP Address), 'Domain Name Server (DNS) Address' (Primary DNS, Secondary DNS), and 'Port' (Port). The 'IP Address' field is marked as 'Required' and the 'DNS' fields are marked as 'Optional'. 'Apply' and 'Cancel' buttons are at the bottom.

Parameter configuration for static IP

6.2 Router Mode Configuration

- Step 1** Set the three-way switch on the side panel to AP after ISY Wireless Range Extender is powered on. Log in to the configuration page after the system is started.
- Step 2** Click Mode Settings and select Router Mode. (The default mode is Bridge Mode.)

- Step 3** Connect your PC to ISY Wireless Range Extender using a wireless network adapter after ISY Wireless Range Extender is restarted successfully. Log in to the configuration page. Click Setup Wizard in the navigation bar on the left pane of the page. Select Yes and click Next. ISY Wireless Range Extender will automatically detect the broadband type.

- Step 4** ISY Wireless Range Extender can detect three types of broadband: DHCP, Static IP, and PPPoE. Perform configurations according to the broadband type you are using.

The screenshot shows the 'Setup Wizard' window. At the top, it says 'PPPoE detected' and 'Successfully detected the type of internet connection you have.' Below this are 'Back' and 'Next' buttons. An arrow points down to the 'PPPoE' configuration section. This section has a 'Password Setting' area with 'Login:' and 'Password:' fields, and a 'Domain Name Server(DNS) Address' section with radio buttons for 'Get Automatically From ISP' (selected) and 'Use These DNS Servers'. There are also fields for 'Primary DNS' and 'Secondary DNS'. Callout boxes provide instructions: 'Enter the account name and password for Internet connection.' for the login fields, and 'Enter the DNS address provided by your ISP. If your ISP does not provide it, select Get Automatically From ISP.' for the DNS section. 'Apply' and 'Cancel' buttons are at the bottom.

Parameter configuration for PPPoE

The screenshot shows the 'Wireless Settings' window. It has a checkbox for 'Enable Wireless Device Radio' which is checked. Below are 'Name(SSID)' and 'Security Options' sections. The 'Name(SSID)' section has a text field containing 'H560X_1789567'. The 'Security Options' section has a dropdown menu set to 'None'. Callout boxes provide instructions: 'You can use the default SSID. However, we suggest modifying the SSID.' for the SSID field, and 'Set the wireless encryption mode and password.' for the Security Options dropdown. 'Back', 'Finish', and 'Cancel' buttons are at the bottom.

Step 5 Click Next. Set the SSID and password and note them down. Click Finish to complete the settings.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

☐ WDS Mode
☒ Wireless Universal Repeater Mode

Next

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:35

#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	Net-001	00:19:87:05:11:88	13	100%	None	<input checked="" type="radio"/>
2	link	00:1F:A4:91:04:50	6	100%	None	<input type="radio"/>
3	cc08508	C0:C1:C0:38:79:C0	11	98%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

6.3 Repeater Mode Configuration

- Step 1** Set the three-way switch on the side panel to Repeater after ISY Wireless Range Extender is powered on. Log in to the configuration page after the system is started.
- Step 2** Click Setup Wizard in the navigation bar on the left pane of the page. Select Wireless Universal Repeater Mode and click Next.

- Step 3** Click Site Survey to search for the wireless network you want to connect. Select a desired network. Click Next.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : None

Back Next

Step 4 Configure the repeater with the same security option as its uplink network. (The following figure takes the security option of None as an example.) Set the encryption password and note it down. Click Next.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

☒ Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface : Pocket-Repeater

Security Options : none

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back Finish Cancel

Step 5 ISY Wireless Range Extender provides the wireless roaming function if you select Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options. Otherwise, manually configure the SSID and security options for the repeater. Click Finish to complete setup wizard.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

☒ WDS Mode

☐ Wireless Universal Repeater Mode

[Next](#)

Setup Wizard

Step2: In WDS Mode, the device would work as a Repeater and could communicate only with another Base Station-mode wireless station. You must enter the wireless MAC address of the other Base Station-mode wireless station in the field named "Basic Station MAC Address" and enter the wireless MAC address of router in the other Base Station-mode wireless station webpage. The change of Repeater IP Address would result the change of LAN IP Address.

WDS Settings

Wireless MAC of this router: 00:1E:E3:42:15:35

Repeater IP Address:

Basic Station MAC Address:

[Back](#) [Next](#)

6.4 WDS Mode Configuration

6.4.1 Repeater Configuration in the WDS Mode

Step 1 Set the three-way switch on the side panel to Repeater after ISY Wireless Range Extender is powered on. Log in to the configuration page after the system is started.

Step 2 Click Setup Wizard in the navigation bar on the left pane of the page. Select WDS Mode and click Next. (Note: The WDS function cannot be used if the channel is set to Auto) Manually set all WDS devices to the same channel.

Step 3 Set the IP address of the LAN port of the repeater and enter the MAC address of the basic station. Click Next...

Setup Wizard

Step3: WEP can (and should) be used to protect WDS communication. "Auto" channel can not be used.

Other Wireless Settings

Name(SSID): Pocket-Repeater

Channel: 7

Security Options: None

Back Finish Cancel

Step 4 Set the SSID, channel, and security encryption for the repeater. The channel cannot be set to Auto. It is recommended to configure the repeater with the same security option as its base station. Set the encryption password and note it down. Click Finish to complete the settings.

WDS Function

☒ Enable WDS Function

☐ Disable Wireless Clients Association

Wireless MAC of this router: 00:1E:E3:42:15:35

Wireless Basic Station

Repeater MAC Address 1:

Repeater MAC Address 2:


Repeater MAC Address 3:

Repeater MAC Address 4:

Apply Cancel

6.4.2 Central Base Station Configuration in the WDS Mode

- Step 1** Set ISY Wireless Range Extender to the Router mode.
- Step 2** Choose Wireless Settings > WDS Function, select Enable WDS Function, and enter the MAC address of the Repeater (Note: One basic station can connect to a maximum of 4 repeaters).

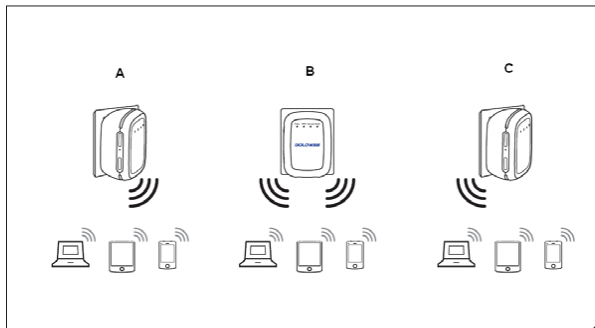

Configure the three routers in this way.

6.4.3 WDS Application

The following figure shows a wireless network for Humans Resource Department (marked as A in the figure), Finance Department (marked as B), and Marketing Department (marked as C) in an enterprise. If the three departments share one wireless router, signals searched by computers may be rather weak or even no signals are available. However, if each of the three departments uses a wireless router, we can use WDS to connect the three routers to provide perfect wireless coverage for the whole areas.

Configure the three routers in this way: Wireless router B functions as the wireless basic station; wireless routers A and C connect to wireless router B by using WDS.

(1) Configuring wireless router B as the wireless basic station

Step 1 Log in to the Web management page of wireless router B. Choose **Wireless Settings > Wireless Basic Settings** and set the SSID, channel, and wireless encryption information. Write down the SSID, channel, and wireless encryption information that are required when you are configuring wireless router A and C.

Step 2 Choose **Wireless Settings > WDS Function** and enable the WDS function. Enter MAC addresses of repeaters (that is, wireless routers A and C in this example). Click **Apply** to save the settings.

(2) Configuring wireless router A

Do as follows to establish WDS connection between wireless routers A and B:

- Step 1** Set wireless router A with the same channel and encryption information as wireless router B.
- Step 2** Choose Wireless Settings > WDS Function and enable the WDS function. Set the IP address of wireless router B different from that of wireless router A to avoid IP address conflict (for example, change the IP address to 192.168.100.20 in the LAN Interface Settings page and log in to the Web management page again). Enter the MAC address of the wireless basic station.**(2) Configuring wireless router A**
- Step 3** Click Apply to save the settings. Then, WDS connection is established between wireless routers A and B.

(3) Configuring wireless router C

Configure wireless router C in the same way as wireless router A. Note that the IP address of the LAN interface must be changed to an IP address that does not conflict with IP addresses of existing computers or devices in the network.

Wireless Client Function

This page help you to configure the wireless client.
Step1: Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or BSS is found, the results will be displayed in the "Site Survey List" three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned : 3

Site Survey List

#	SSID	MAC Address	Channel	Signal	Encrypt	Select
1	Ralink_AP111	00-AA-BB-01-23-45	9	96%	None	<input checked="" type="radio"/>
2	yuanpeifeng	00-1E-E3-00-35-08	6	96%	None	<input type="radio"/>
3	test_2G	06-1F-6F-8E-87-1E	6	96%	None	<input type="radio"/>

Next

Wireless Client Function

Step2: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Security Options

Security Options : None

Back


Finish

6.5 Client Mode Configuration

Step 1 Click Setup Wizard in the navigation bar on the left pane of the page. Click Site Survey to search for the wireless network you want to connect.

Step 2 Enter encryption information of the selected wireless network. Click Finish to complete the settings.

7. Web Configuration general instructions

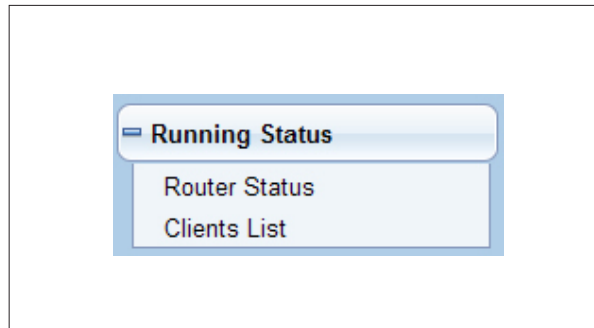

NOTE: This chapter explains the web configuration of the ISY Wireless Range Extender in general. Some options explained in this chapter may not be available in all operating modes. If you are looking for information on something which is not listed in the 'General' chapter, please refer to the chapter for the specific operating mode (Repeater, Router, Bridge etc.) you are using.

7.1 Running Status

Click Running Status and the extended navigation menu is shown as follows

Click the submenu to enter a specific configuration page.

7.1.1 Router Status

Choose Running Status > Router Status and
wwwthe Router Status page is displayed.

In this page, you can view information about the current running status
of ISY Wireless Range Extender, including system information,
LAN port status, and wireless network status.

Router Status

System Info	
Hardware Version	V1.0.0
Firmware Version	V1.0.0
Product Name	Wireless Router
Work Mode	Bridge Mode
Time and Date	1971-01-01 10:32:45
LAN Port	
MAC Address	00:1E:E3:5B:DE:23
IP Address	192.168.100.254
IP Subnet Mask	255.255.255.0
Wireless Port	
Wireless Network Name (SSID)	PocketAP-001
Region	China
Wireless Channel	Auto
802.11 Mode	Mixed 802.11b/g/n
Wireless Radio	Enabled
Broadcast Name	ON
Wireless Isolation	OFF
Wi-Fi Protected Setup(WPS)	ON
Wireless Security Mode	None

Clients List

Wired Devices			
#	IP Address	MAC Address	Device Name
Wireless Devices(Wireless intruders also show up here)			
#	IP Address	MAC Address	Device Name
1	192.168.100.12	00:28:F2:4F:AC:60	unknown

[Refresh](#)

7.1.2 Clients List

Choose Running Status > Clients List and the Clients List page is displayed.

This page displays information of computers connected to the router, including the IP address, and MAC address of each computer.

Mode Settings

Please choose your mode as follows:

☒ Bridge Mode

In this mode, the port is used as a **lan** port.
You can login web by either connecting you wired network card and the lan port with ethernet cable or using your wireless network card to connect this wireless network.

[View Wireless Basic Config](#)

☐ Router Mode

[Apply](#) [Cancel](#)

7.2 Setup Wizard


For settings, refer to section 6.1 "Bridge Mode Configuration".

7.3 Mode Setting

Click Mode Settings and the Mode Settings page is displayed.

Bridge Mode: The interface on its case is an LAN interface. Users can connect ISY Wireless Range Extender and the PC using an RJ45 cable or a wireless network card.


Router Mode: Computers can connect to ISY Wireless Range Extender in a wireless way only.

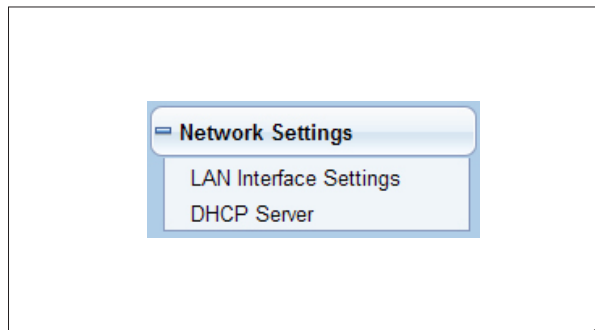

7.4 Network Settings

Click LAN Interface Settings and the extended navigation menu is shown as follows:

Click a submenu to perform specific parameter configurations.

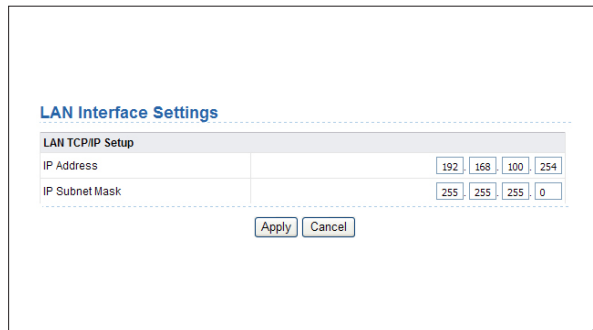

7.4.1 LAN Interface Settings

Choose Network Settings > LAN Interface Settings and the LAN Interface Settings page is displayed.

You can modify the IP address and IP subnet mask of the LAN port as required.

Note: If you change the default IP address, you must use the new IP address to log in to the Web configuration page of the router and the default gateway of all hosts in the LAN must be set to the new IP address for Internet access.

The subnet mask of all hosts in the LAN must be the same as the subnet mask specified in the LAN Interface Settings page.

DHCP Server

☐ Use Router as DHCP Server

Starting IP Address:

Ending IP Address:

DHCP Lease Time (1 - 160 hours):

Address Reservation

#	IP Address	Device Name	MAC Address

7.4.2.1 Using the Router as a DHCP Server

Use Router as DHCP Server: If you select the Use Router as DHCP Server check box, ISY Wireless Range Extender serves as a DHCP server to automatically assign IP addresses to computers connected to it.

Starting IP Address/Ending IP Address: Set the starting and ending IP

addresses to specify a pool of IP addresses to be assigned by the DHCP server. After you set Starting IP Address/Ending IP Address, hosts in the LAN obtain IP addresses that are in the range of the starting and ending IP addresses.

DHCP Lease Time: The valid time for an IP address that is automatically assigned by the DHCP server to a host. The DHCP server does not assign the IP address to other hosts within the specified time.

7.4.2 DHCP Server

Choose Network Settings > DHCP Server and the DHCP Server page is displayed.

DHCP refers to Dynamic Host Configuration Protocol. If Use Device as DHCP Service is selected, ISY Wireless Range Extender automatically assigns IP addresses to computers in the LAN. Users do not need to configure TCP/IP protocol parameters such as the IP address, the subnet mask, the gateway, and the DNS server information for computers connected to the router's LAN.

Address Reservation			
#	IP Address	Device Name	MAC Address
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/>			

Address Reservation

Address Reservation Table				
	#	IP Address	Device Name	MAC Address
<input type="radio"/>	1	192.168.100.2	gj1291d	00:1F:A4:90:73:F3
<input type="radio"/>	2	192.168.100.12	unknown	00:26:F2:4F:AC:60

IP Address

MAC Address

Device Name

7.4.2.2 Using Address Reservation

When you specify a reserved IP address for a computer in the LAN, the computer always receives the same IP address each time it accesses the router's DHCP server. Reserved IP addresses should be assigned to computers or servers that require permanent IP settings.



To reserve an IP address

Step 1 Click Add to enter the Address Reservation page.

Step 2 Select one item from Address Reservation Table, or enter the IP address in the IP Address field to assign to the computer or server (Choose an IP address from the IP address pool that you have specified, for example 192.168.100.x). Enter the MAC address and device name of the computer or server.

Step 3 Click Add to add a new item into Address Reservation.

Step 4 Click Apply to save the settings.

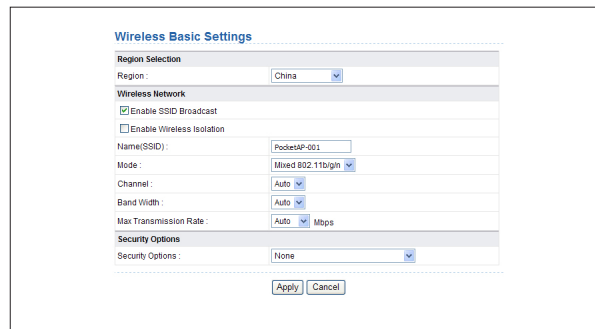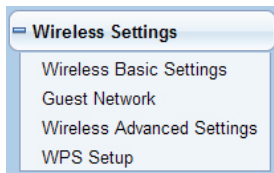

7.5 Wireless Settings

Click Wireless Settings and the extended navigation menu is shown as follows: Click a submenu to perform specific parameter configurations.

7.5.1 Wireless Basic Settings

Choose Wireless Settings > Wireless Basic Settings and the Wireless BasicSettings page is displayed.

Region: Select the region where you are located.

Enable SSID Broadcast: If enabled, the router broadcasts its SSID in the wireless network. Wireless clients can scan the SSID and access the wireless network under the SSID.

Enable Wireless Isolation: If selected, wireless clients connected to the network of the same SSID can access the Internet only, but cannot communicate with each other.


Name (SSID): Set the name for the wireless network. The SSID can contain up to 32 characters and can be letters, numerals, underlines, and any combinations of them. The SSID is case-sensitive.

Mode: Select the wireless mode. Mixed 802.11b/g/n is recommended.

Channel: The channel for transmitting wireless signals. The default channel is Auto. When you select Auto, ISY Wireless Range Extender automatically selects the best channel from the available channels according to actual situations.

Band Width: The bandwidth occupied for wireless signal transmission.
Max Transmission Rate: The maximum transmission rate of ISY Wireless Range Extender.

Security Options: Set the security encryption of the wireless network, to prevent unauthorized access and listening.

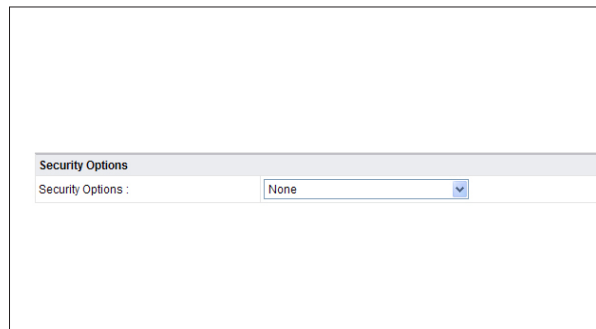

Security Options


None

Data encryption is not adopted and the network is not secure. Any stations can access the network. This option is not recommended.

WEP

Wired equivalent privacy. You can use WEP 64- or 128-bit encryption.

Authentication Type: Select the authentication type that the system adopts. Three authentication types are available: Automatic, Open, and Shared keys.

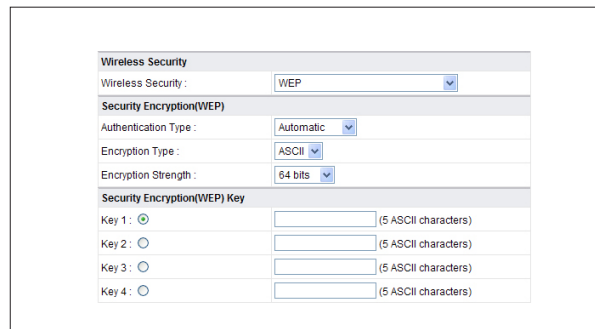

Automatic: If selected, the router uses an authentication type of Open or Shared keys according to the request of the host.

Open: If selected, hosts in the wireless network can pass the authentication and connect to the wireless network without using a password. However, the password is required if you want to transmit data.

Shared keys: If selected, hosts in the wireless network can pass authentication only when the correct password is entered. Otherwise, the hosts cannot connect to the wireless network.

Encryption Type: The type of the key to be set. Hexadecimal and ASCII code are available

Hex: Valid characters for keys contain 0-9 and A-F.

ASCII: Valid characters for keys contain all characters of the keyboard.

Encryption Strength: The encryption strength determines the length of the key.

If Encryption Strength is set to 64 bits, set the key to 10 hexadecimal digits or 5 ASCII characters.

If Encryption Strength is set to 128 bits, set the key to 26 hexadecimal digits or 13 ASCII characters.

Key 1/2/3/4: Set the key based on the selected encryption type and encryption strength.

Security Options	
Security Options :	WPA-PSK[TKIP] ▼
Security Options(WPA-PSK)	
PassPhrase :	<input type="text"/> (8-63 characters or 64 hex digits)

WPA-PSK[TKIP] or WPA2-PSK[TKIP]

WPA-PSK: Preshared key Wi-Fi protection access
 WPA2-PSK: Preshared key Wi-Fi protection access version 2
 TKIP: Temporal Key Integrity Protocol

Note that the 802.11n mode does not support the TKIP algorithm.

PassPhrase: Enter 8-63 ASCII characters or 64 hexadecimal digits.

Security Options	
Security Options :	WPA2-PSK[AES] ▼
Security Options(WPA2-PSK)	
PassPhrase :	<input type="text"/> (8-63 characters or 64 hex digits)

WPA-PSK[AES] or WPA2-PSK[AES]

WPA-PSK: Preshared key Wi-Fi protection access.
 WPA2-PSK: Preshared key Wi-Fi protection access version 2.
 AES: Advanced Encryption Standard

PassPhrase: Enter 8-63 ASCII characters or 64 hexadecimal digits.

Security Options

Security Options : ▼

Security Options(WPA-PSK+WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

WPA-PSK/WPA2-PSK+[TKIP]/[AES]

It allows the client to use either WPA-PSK[TKIP]/[AES] or WPA2-PSK[TKIP]/[AES].

PassPhrase: Enter 8-63 ASCII characters or 64 hexadecimal digits.

Note: After you complete configuring wireless settings for ISY Wireless Range Extender, only hosts that have the same wireless settings (for example, the SSID) as ISY Wireless Range Extender can connect to it. If you configure security settings for ISY Wireless Range Extender, hosts must have the same security settings (for example, the password) as ISY Wireless Range Extender in order to connect to ISY Wireless Range Extender.

Guest Network

Network Profiles					
	Scheme	SSID	Security	Apply	SSID Broadcast
<input checked="" type="radio"/>	1	PocketAP-002	None	NO	YES
<input type="radio"/>	2	PocketAP-003	None	NO	YES
<input type="radio"/>	3	PocketAP-004	None	NO	YES
<input type="radio"/>	4	PocketAP-005	None	NO	YES

Wireless Settings-Profile 1

☐ Enable Guest Network

☒ Enable SSID Broadcast

☐ Allow Guest to access My Local Network

☐ Enable Wireless Isolation

Guest Wireless Network Name(SSID) :

Security Options-Profile 1

Security Options : ▼

7.5.2 Guest Network

If you do not want visitors to know your wireless security key, you can use the guest network to allow them to use your Internet without knowing your wireless connection password.

Choose Wireless Settings > Guest Network and the Guest Network page is displayed.

Network Profiles: Brief description of the created guest network. You can create up to four guest networks. A network profile contains the SSID and encryption mode, whether to use the guest network, and whether to broadcast SSID. You can click the radio button of a profile to view detailed information or modify settings.

Enable Guest Network: If enabled, both you and visitors can connect to the network by using the SSID of the guest network.

Enable SSID Broadcast: If enabled, ISY Wireless Range Extender broadcasts its SSID to all wireless stations.

Allow Guest to access My Local Network: If enabled, visitors using the SSID of a guest network can access not only the Internet but also the LAN of ISY Wireless Range Extender, like users using the primary SSID of the network. If disabled, visitors using the SSID of a guest network cannot access the LAN of ISY Wireless Range Extender.

Enable Wireless Isolation: If selected, wireless clients connected to the guest network of the same SSID can access the Internet only, but cannot communicate with each other.

Guest Wireless Network Name (SSID): Set the name of the guest network.

Security Options: Refer to security option descriptions in section 8.5.2 "Wireless Basic Settings". After finishing settings, click Apply to save the settings.

Wireless Advanced Settings

Wireless Advanced Setting

☒ Enable Wireless Router Radio

Fragmentation Length (256-2346)

DTIM (1-255)

Beacon Interval (20-1000)

MAX Clients (0-12)

CTS/RTS Threshold (1-2347)

Preamble Mode

Guard Interval

Transmit Power Control

WPS Settings

Router's PIN

☒ Enable WPS ☐ Disable Router's PIN

Wireless Card Access List

[Setup Access List](#)

DTIM (1-255): Set the interval for sending DTIM frames.

Beacon Interval (20-1000): The beacon interval is the frequency of sending Beacon frames. Set the interval for sending Beacon frames. The unit is millisecond (ms). The default value is 100 ms.

MAX Clients (0-12): Set the maximum number of clients. 0 indicates the number of connected clients is not limited.

CTS/RTS Threshold (1-2347): Set the CTS/RTS threshold. If the length of a packet is greater than the specified RTS value, ISY Wireless Range Extender sends an RTS frame to the destination station to negotiate. After receiving an RTS frame, the wireless station responds with a Clear to Send (CTS) frame to ISY Wireless Range Extender, notifying that they can communicate with each other.

7.5.3 Wireless Advanced Settings

Choose Wireless Settings > Wireless Advanced Settings and the Wireless Advanced Settings page is displayed.

Enable Wireless Router Radio: If you disable the wireless router radio, wireless devices cannot connect to the ISY Wireless Range Extender router. If you do not use your wireless network for a period of time, you can clear this check box and disable all wireless connectivity.

Fragmentation Length (256-2346): Set the threshold of fragmentation length. If the length of a packet exceeds the set value, the packet is automatically fragmented into several packets. The value of Fragmentation Length cannot be too small because excessive packets reduce wireless network performance. The default value is 2346.

Preamble Mode: A preamble (especially the 802.11b High Rate/DSSS PHY field; 56 digits synchronized field for short preamble) defines the length of the CRC correction block for communication between wireless devices. Short preamble should be applied in a network with intense traffics. It helps improve the efficiency of a wireless network responding to applications that have high requirement of real-time, such as streaming video and voice-over-IP telephony.

Guard Interval:

Short GI: The interval is 400 ns. When short GI is enabled, ISY Wireless Range Extender can receive and send short-frame-interval packets. This helps improve the transmission rate of ISY Wireless Range Extender.



Long GI: The interval is 800 ns.

Transmit Power Control: Set the transmit power of the wireless network. It is recommended to use the default setting of 100%.

Router's PIN: Display the PIN to be used for the wireless client when wireless settings of the router are configured through WPS.

Enable WPS: Functions in the WPS Setup page are available only after the Enable WPS check box is selected. If the check box is not selected, the WPS Setup menu item is greyed out.

Disable Router's PIN: The PIN mode function in the WPS Setup page is available only when the Disable Router's PIN check box is not selected. If the check box is selected, the PIN mode option is unavailable.

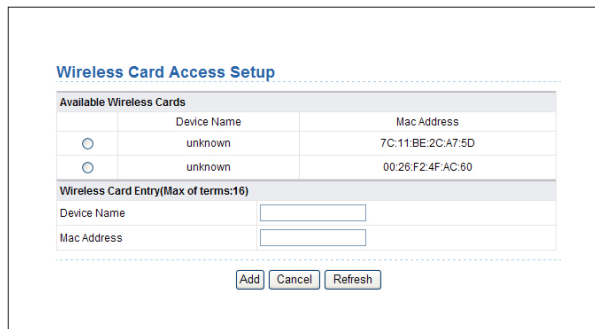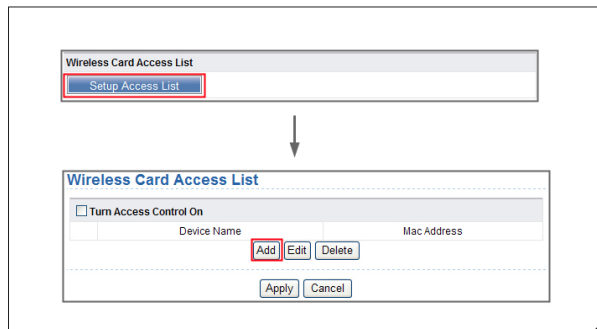

Restricting wireless access by MAC address

When a wireless card access list is configured and enabled, the router checks the MAC address of any wireless device attempting a connection and allows only connections to computers identified on the trusted computer list. The MAC address is a network device's unique 12-character physical address, containing the hexadecimal characters 0-9, a-f, or A-F only. The MAC address is in the format of XX:XX:XX:XX:XX:XX.

To restrict wireless access by MAC address:

- Step 1** Click Setup Access List button in the Wireless Advanced Settings page to display the Wireless Card Access List page.
- Step 2** Click Add to add a wireless device to the wireless access control list. The Wireless Card Access Setup page is displayed.

- Step 3** If the computer you want appears in the Available Wireless Cards list, you can select the radio button of that computer to obtain its MAC address. Otherwise, you can manually enter a name and MAC address of the computer to be authorized. Generally, the MAC address is labeled on the bottom of the wireless device.
- Step 4** Click Add to add this wireless device to the wireless card access list. The page jumps to the list page.


- Step 5** Select Turn Access Control On. If selected, you can restrict PCs' access to the wireless network, only allowing specified PCs to access your network according to their MAC addresses.
- Step 6** Click Apply to save your Wireless Card Access List settings. Now, only devices on this list can wirelessly connect to the ISY Wireless Range Extender router.

WPS refers to Wi-Fi Protected Setup.

You can use WPS to establish wireless connection in a quick and secure way if the uplink AP or terminal (for example, the network adapter) has the WPS function. It is suggested to first configure wireless encryption for the uplink AP. If you change the wireless encryption mode after having establishing wireless connection using WPS, you must use WPS to establish wireless connection again. Note that if the wireless client does not support WPS you must manually configure the wireless client (such as SSID, security mode, and password) to make it have the same SSID and wireless security settings as the router. The following describes how to configure WPS for the AP mode.

7.5.4.1 Using the WPS Button

In the AP mode with WDS disabled, press the WPS button on the side panel of ISY Wireless Range Extender and the WPS button on the client device. ISY Wireless Range Extender can perform WPS encrypted connection to the downlink client device.

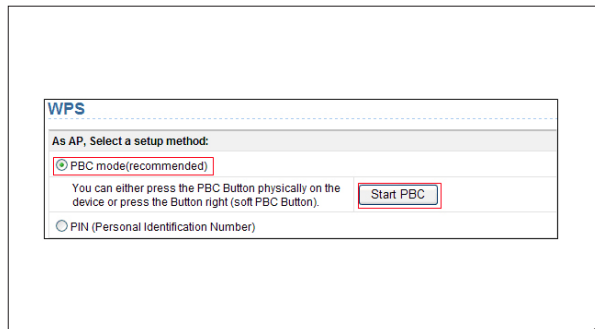


7.5.4.2 Using the Web Page

You can perform WPS settings using the Web page for configuration. Choose Wireless Settings > WPS Setup to display the WPS Setup page.

PBC mode

- Step 1** Select Push Button and click Start PBC. WPS encrypted connection starts

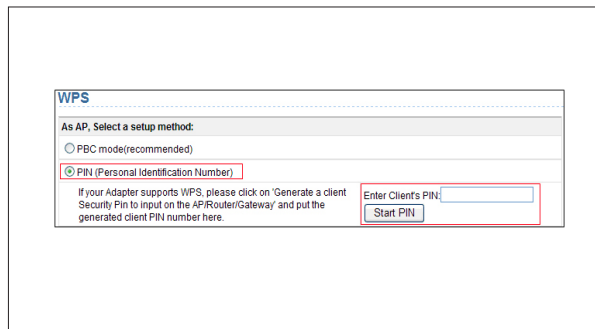


Step 2 Press the WPS button on the network adapter or click the PBC button in the network adapter configuration tool within 2 minutes to start WPS connection. After WPS connection is established, the following page is displayed, indicating that the WPS connection is completed.

PIN mode

Step 1 Select PIN, enter the PIN code of the network adapter (refer to the client of the network adapter), and click Start PIN to start WPS connection.




Step 2 Click the PIN button on the network adapter within 2 minutes to start WPS connection. After WPS connection is established, the following page is displayed, indicating that the WPS connection is completed.

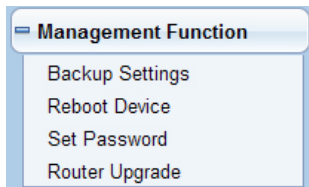

7.6 Management Function

Click Management Function and the extended navigation menu is shown as follows.

Click a submenu to perform specific parameter configurations.

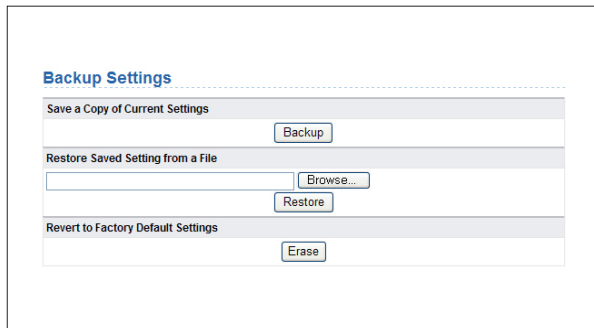

7.6.1 Backup Settings

Choose Management Function > Backup Settings and the Backup Settings page is displayed.

In this page, you can export configuration information of the router to the computer in the form of XML for later use, import a previously saved or a new configuration file, and restore the factory default settings of the router.

Backup

Click Backup and save configuration information of the router as a local file.

Note: Before saving your configuration file, change the administrator password to the default (admin) in case you forget your password. Then change it again after you have saved the configuration file. If you forget the password, you will need to reset the configuration to factory defaults.

Restore

The Backup and Restore options in the Backup Settings page let you save and retrieve a file containing your router's configuration settings. Click Browse... to select the configuration file restored in your computer and click Restore to load the file to the router.

Erase


Under some circumstances (for example, if you move the router to a different network or if you have forgotten the password) you might want to erase the configuration and restore the factory default settings. Click Erase to restore the factory default settings of the router. This operation has the same effect as pressing the Reset button on the side panel for 3-6 seconds.



7.6.2 Reboot Router

Choose Management Function > Reboot Router and the Reboot Router page is displayed.


Click Reboot to reboot the router. After the router is rebooted, the system jumps to the login page.

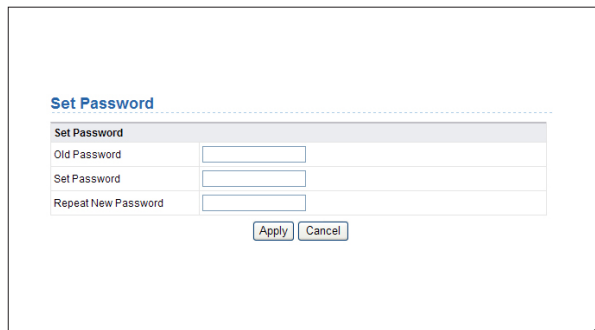

7.6.3 Set Password

Choose Management Function > Set Password and the Set Password page is displayed. In this page, you can change the login password.

Note: For security, it is strongly recommended to change the default password of the administrator. If you forget the password, you can restore the router to the default settings. The default password is admin.

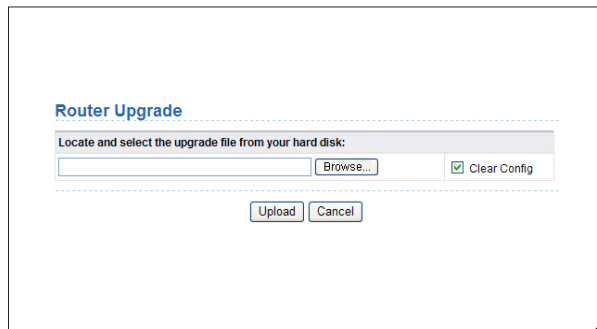The image shows a web-based interface for upgrading a router. At the top, the title "Router Upgrade" is displayed in blue. Below the title, a grey bar contains the instruction "Locate and select the upgrade file from your hard disk:". Underneath this bar, there is a text input field, a "Browse..." button, and a checkbox labeled "Clear Config" which is currently checked. At the bottom of the interface, there are two buttons: "Upload" and "Cancel".

Router Upgrade

Locate and select the upgrade file from your hard disk:

☒ Clear Config

7.6.4 Router Upgrade

Choose Management Function > Router Upgrade and the Router Upgrade page is displayed.

To upgrade the software of the router:

- Step 1** Click Browse... to navigate to the latest software.
 - Step 2** Select the correct upgrade file. If you select Clear Config, the router restores to the default settings after upgrade is finished. If you do not select it, the current settings remain.
 - Step 3** Click Upload to start upgrade.
- After the upgrade is completed, the router automatically reboots.

Note: After the software upgrade, ISY Wireless Range Extender returns to the factory default settings. In case of losing the previous configuration information, please save settings before updating the software. Do not power off the router during the upgrade.

8. Web Configuration for the Bridge Mode

8.1. Router Status

Choose Running Status > Router Status and the Router Status page is displayed.

In this page, you can view information about the current running status of ISY Wireless Range Extender, including system information, LAN port status, and wireless network status.

Router Status

System Info	
Hardware Version	V1.0.0
Firmware Version	V1.0.0
Product Name	Wireless Router
Work Mode	Bridge Mode
Time and Date	1971-01-01 10:32:45
LAN Port	
MAC Address	00:1E:E3:5B:DE:23
IP Address	192.168.100.254
IP Subnet Mask	255.255.255.0
Wireless Port	
Wireless Network Name (SSID)	PocketAP-001
Region	China
Wireless Channel	Auto
802.11 Mode	Mixed 802.11b/g/n
Wireless Radio	Enabled
Broadcast Name	ON
Wireless Isolation	OFF
Wi-Fi Protected Setup(WPS)	ON
Wireless Security Mode	None

The screenshot shows a web interface titled "Mode Settings". Below the title is a section "Please choose your mode as follows:" with two radio button options: "Bridge Mode" (selected) and "Router Mode". Under "Bridge Mode", there is explanatory text: "In this mode, the port is used as a lan port. You can login web by either connecting you wired network card and the lan port with ethernet cable or using your wireless network card to connect this wireless network." To the right of this text is a button labeled "View Wireless Basic Config". At the bottom of the form are "Apply" and "Cancel" buttons.

8.2 Setup Wizard

For settings, refer to section 6.1 "Bridge Mode Configuration".

8.3 Mode Setting

Click Mode Settings and the Mode Settings page is displayed.

Bridge Mode: The interface on its case is an LAN interface. Users can connect ISY Wireless Range Extender and the PC using an RJ45 cable or a wireless network card.

Router Mode: Computers can connect to ISY Wireless Range Extender in a wireless way only.

9. Web Configuration for the Router Mode

9.1.1 Router Status

Choose Running Status > Router Status and the Router Status page is displayed.

Router Status	
System Info	
Hardware Version	V1.0.0
Firmware Version	V1.0.0
Product Name	Wireless Router
Work Mode	Router Mode
Time and Date	1971-01-01 09:22:57
Internet Port	
MAC Address	00:1E:E3:5B:DE:23
Internet Access Mode	Disconnected(DHCP)
IP address	0.0.0.0
IP Subnet mask	0.0.0.0
Default Gateway	0.0.0.0
Domain Name Server	0.0.0.0
LAN Port	
MAC Address	00:1E:E3:5B:DE:24
IP Address	192.168.100.254
IP Subnet Mask	255.255.255.0
Wireless Port	
Wireless Network Name (SSID)	PocketAP-001
Region	China
Wireless Channel	Auto
802.11 Mode	Mixed 802.11b/g/n
Wireless Radio	Enabled
Broadcast Name	ON
Wireless Isolation	OFF
Wi-Fi Protected Setup(WPS)	ON
Wireless Security Mode	None
<div>Show Statistics Connection Status</div>	

Statistic Information

Port	Status	TxPkts	RxPkts	Collisions	Tx B/s	Rx B/s	Up Time
WAN	LinkDown	0	0	0	0	0	00:00:00
WLAN	Auto	28540	72017	0	25757402	15535841	01:25:03

System Up Time01:25:20

Poll Interval

5

(1~86400 secs)

Set Interval

Stop

In this page, you can view information about the current running status of ISY Wireless Range Extender, including system information, connection status of the Internet port, LAN port status, and wireless network status.

Click Show Statistics and the Statistic Information page as shown in the following figure is displayed.

In this page, you can view performance statistics information of ISY Wireless Range Extender, including the numbers of sent and received packets at each port.

Set Interval: Set the interval for traffic statistics.

Stop: If you click this button, this page always displays statistics information that was refreshed for the last time and it is not refreshed any more.

Connection Status	
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
DHCP Server	0.0.0.0
DNS Server	0.0.0.0
Lease Obtained	0Day,0Hour,00Minute
Lease Expires	0Day,0Hour,00Minute
<input type="button" value="Release"/> <input type="button" value="Renew"/>	
<input type="button" value="Close Window"/>	

Click Connection Status in the Router Status page, and the Connection Status page is displayed. This page displays current connection information of ISY Wireless Range Extender. The following takes WAN connection of DHCP as an example.

Release: Click the button and ISY Wireless Range Extender sends a request to the ISP for releasing the IP address, the subnet mask, the default gateway, and DNS server settings.

Renew: Click the button and ISY Wireless Range Extender dynamically obtains an IP address, a subnet mask, the default gateway, and DNS server settings from the ISP. The information will be displayed in this page for details.

9.2 WAN Interface Settings

Choose Network Settings > WAN Interface Settings and the WAN Interface Settings page is displayed.

The router supports 5 modes of WAN connection, including Dynamic IP (DHCP), Static IP, PPPoE, PPTP, and L2TP. Select the WAN connection you use. Contact your ISP if you do not know your WAN connection mode.

(1) Dynamic IP (DHCP)

If you select dynamic IP (DHCP), ISY Wireless Range Extender automatically obtains the IP address from the ISP automatically. Select DHCP when the ISP does not provide any IP network parameters.

Account Name: The account name is provided by your ISP. If the ISP does not provide it, you can leave the item blank.

Domain Name Service (DNS) Address: Select Use These DNS Servers if you know that your ISP does not automatically transmit DNS addresses to the router during login. And enter the IP address of your ISP's primary DNS server. Enter a secondary DNS server address if available.

MTU Size: Set the maximum transmission unit. The default value is recommended.

Router MAC Address: Physical address of the router.

Generally, select Use Default Address.

If the ISP requires MAC address authentication, Select Use Computer MAC Address or Use This MAC Address. If you select Use Computer MAC Address, the MAC address of the current computer serves as the MAC address of the router. If you select Use This MAC Address, you need to enter the MAC address of another computer. The format of an MAC address is XX:XX:XX:XX:XX:XX. After finishing settings, click Apply to save the settings.

(2) Static IP

If the ISP provides the IP address, subnet mask, and information about the gateway and DNS server, select Static IP. Contact your ISP if you do not know the information.

Account Name: The account name is provided by your ISP. If the ISP does not provide it, you can leave the item blank.

IP Address: Enter the WAN IP address provided by the ISP. The parameter must be entered.

IP Subnet Mask: Enter the WAN subnet mask provided by the ISP. It varies with the network type. It is usually 255.255.255.0 (Class C).

Gateway IP Address: Enter the IP address of the gateway provided by the ISP. It is the IP address used for connecting to the ISP.

Primary DNS: Enter the IP address of the primary DNS server if necessary.

Secondary DNS: Enter the IP address of that DNS server if the ISP provides another DNS server.

MTU Size: Set the maximum transmission unit. The default value is recommended.

Router MAC Address: See descriptions on setting Router MAC Address for DHCP. After finishing settings, click Apply to save the settings.

WAN Interface Settings

Does your Internet Connection Require a Login? ☒ Yes ☐ No

Internet Service Provider **PPPoE**

Login

Password

Service Name (if Required)

Connection Mode **Always On**

Idle Timeout (in minutes)

Domain Name Server (DNS) Address

☒ Get Automatically From ISP

☐ Use These DNS Servers

Primary DNS

Secondary DNS

MTU Setting

MTU Size(516-1460 bytes)

Device MAC Address

☒ Use Default Address

☐ Use Computer MAC Address

☐ Use This MAC Address

interval of the specified time (for example, 10 seconds) until the connection is established. If you pay for Internet access monthly, we recommend you to use this connection mode.

Dial On Demand: If you select it, the system automatically establishes a connection when a network access request from the LAN is received. If no network access request is sent from the LAN within the specified time of Idle Timeout, the system automatically interrupts the connection. If you pay for Internet access by time, you are recommended to use this connection mode, which effectively saves the expense of Internet access.

Manually Connect: If you select it, you need to manually set dialup connection after startup.

Idle Timeout: If the system does not detect any Internet access behavior within the specified time of Idle Timeout, the system interrupts the Internet connection.

Domain Name Server (DNS) Address: Select Use These DNS Servers if you know that your ISP does not automatically transmit DNS addresses to the router during login. And enter the IP address of your ISP's primary DNS server. Enter a secondary DNS server address if available.

MTU Size: Set the maximum transmission unit. The default value is recommended.

Router MAC Address: See descriptions on setting Router MAC Address for DHCP. After finishing settings, click Apply to save the settings.

(3) PPPoE

If the ISP provides the user name and password for PPPoE (Point-to-Point Protocol over Ethernet) dialup, select PPPoE.

Login: Enter the user name for PPPoE dialup provided by the ISP.

Password: Enter the password for PPPoE dialup provided by the ISP.

Service Name: If several PPPoE servers are available, specify one in this field.

Connection Mode:

Always On: If you select it, the system automatically establishes a connection. If ISY Wireless Range Extender is disconnected from the network because of external factors when you are using the Internet access service, the system attempts connection in an

WAN Interface Settings

Does your Internet Connection Require a Login? ☒ Yes ☐ No

Internet Service Provider: PPTP

Login: _____

Password: _____

Connection Mode: Always On

Idle Timeout (in minutes): 1

My IP Address: _____

Subnet Mask: _____

Server Address: _____

Gateway IP Address: _____

Domain Name Server (DNS) Address

☒ Get Automatically from ISP

☐ Use These DNS Servers

Primary DNS: _____

Secondary DNS: _____

MTU Setting

MTU (Standard: 1450 bytes): Auto

Device MAC Address

☒ Use Default Address

☐ Use Computer MAC Address

☐ Use This MAC Address: _____

Apply Cancel

(4) PPTP

If the ISP provides the user name and password for PPTP dialup, select PPTP.

Login: Enter the user name for PPTP dialup provided by the ISP.

Password: Enter the password for PPTP dialup provided by the ISP.

Connection Mode:

Always On: If you select it, the system automatically establishes a connection. If ISY Wireless Range Extender is disconnected from the network because of external factors when you are using the Internet access service, the system attempts connection in an interval of the specified time (for example, 10 seconds) until the connection is established. If you pay for Internet access monthly, we recommend you to use this connection mode.

Dial On Demand: If you select it, the system automatically establishes a connection when a network access request from the LAN is received. If no network access request is sent from the LAN within the specified time of Idle Timeout, the system automatically interrupts the connection. If you pay for Internet access by time, you are recommended to use this connection mode, which effectively saves the expense of Internet access.

Manually Connect: If you select it, you need to manually set dialupconnection after startup.

Idle Timeout: If the system does not detect any Internet access behavior within the specified time of Idle Timeout, the system interrupts the Internet connection.

My IP Address: Enter your IP address. You can also leave this field blank.

Subnet Mask: Enter the subnet mask. You can also leave this field blank.

Sever Address: Enter the IP address of the server. You can also leave this field blank.

Gateway IP Address: Enter the IP address of the gateway. You can also leave this field blank.

Domain Name Server (DNS) Address: Select Use These DNS Servers if you know that your ISP does not automatically transmit DNS addresses to the router during login. And enter the IP address of your ISP's primary DNS server. Enter a secondary DNS server address if available.

WAN Interface Settings

Does your Internet Connection Require a Login? ☒ Yes ☐ No

Internet Service Provider: L2TP

Login: _____

Password: _____

Connection Mode: Always On

Use Tunnel (in minutes): 1

My IP Address: _____

Subnet Mask: _____

Server Address: _____

Gateway IP Address: _____

Domain Name Server (DNS) Address

☒ Get Automatically From ISP

☐ Use These DNS Servers

Primary DNS: _____

Secondary DNS: _____

MTU Setting

MTU Size (15-1450 bytes): 1492

Device MAC Address

☒ Use Default Address

☐ Use Computer MAC Address

☐ Use This MAC Address: 00:00:00:00:00:00

Apply Cancel

MTU Size: Set the maximum transmission unit. The default value is recommended.

Router MAC Address: See descriptions on setting Router MAC Address for DHCP.
After finishing settings, click Apply to save the settings.

(5) L2TP

If the ISP provides the user name and password for L2TP dialup, select L2TP.

For details of parameter settings for this page, refer to previous parameter descriptions for PPTP.

9.3 WDS Function

Wireless distribution system (WDS) enables interconnection between APs in an IEEE 802.11 wireless network. It extends the wireless network through several APs, without connection of the wired backbone network. If you want to use WDS to achieve wireless repeating or bridging, enable WDS.


Choose Wireless Settings > WDS Function and the WDS Function page is displayed.

Enable WDS Function: Enable the WDS function if you want to use this function. Note that the WDS function cannot be enabled if the channel is set to Auto.

Enable Wireless Clients Association: If not selected, the wireless basic station does not transmit any signals to clients that are directly connected to it.

Central Base Station: In this mode, the router serves as a basic station to communicate with repeaters. The basic station forwards the data of communication between repeaters to the destination repeaters. Repeaters should be configured accordingly. Note that a wireless basic station can be configured with up to four repeaters.


Repeater MAC Address 1/2/3/4: Enter the MAC address of the repeater. After finishing settings, click Apply to save the settings. For WDS application description, refer to section 6.4.3 "WDS Application".

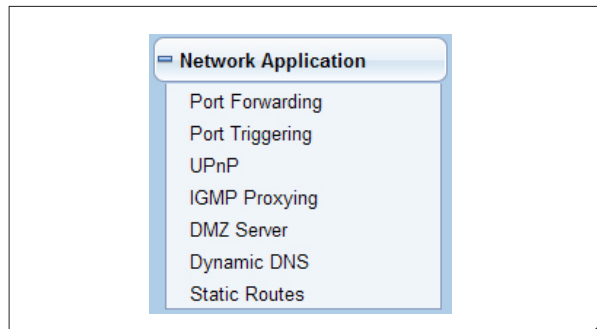

9.4 Network Application

Click Network Application and the extended navigation menu is shown as follows:

Click a submenu to perform specific parameter configurations.

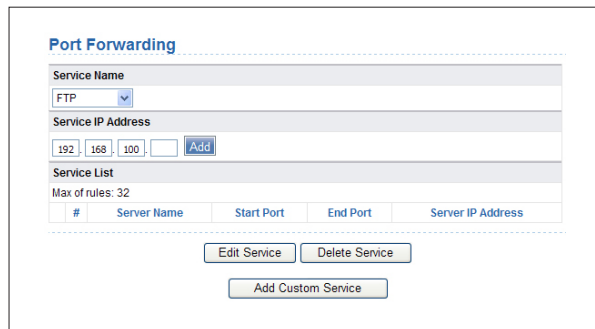

9.4.1 Port Forwarding

By default, the firewall function of the router hides your LAN. As a result, other users on the Internet can detect only the router, but cannot access a certain PC in the LAN directly. If you want to access a PC in a LAN, you need to configure port forwarding for the router and map the desired port to the corresponding PC in the LAN. The router forwards packets to the PC according to the port mapping rule after receiving an access request from the Internet. In this way, communication is successfully established between the Internet and the PC in the LAN.

Choose Network Application > Port Forwarding and the Port Forwarding page is displayed.

Ports - Custom Service

Service Name:	<input type="text"/>
Protocol :	TCP <input type="button" value="v"/>
Starting Port	<input type="text"/> (1~65535)
Ending Port	<input type="text"/> (1~65535)
Server IP Address	<input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="1"/> <input type="text"/>

Service Name: Select a service type.

Service IP Address: Enter the IP address of the computer that provides services. Click the Add Custom Service button and the Ports - Custom Service page is displayed:

Service Name: Select a service type.

Protocol: The protocol used at the mapping port. You can select TCP/UDP, TCP, or UDP. It is recommended to use TCP/UDP if you do not know which protocol should be used.

Starting Port: After the connection to the mapping port is established, the corresponding port is open and the application can initiate subsequent connection requests to the open port.

Ending Port: Set the end port of the mapping port range.

Service IP Address: Enter the IP address of the computer that provides services.
After finishing settings, click Apply to save the settings.

Port Triggering

☐ Enable Port Triggering

Port Triggering Timeout(in minutes) (1-9999)

Max of rules: 32

#	Server Name	Service Type	Required Inbound Connection	Service User
<input type="button" value="Add Service"/> <input type="button" value="Edit Service"/> <input type="button" value="Delete Service"/>				

Port Triggering - Services

Service Name

Service User

Service Type

Triggering Starting Port

Triggering Ending Port

Required Inbound Connection

Connection Type

Starting Port

Ending Port

9.4.2 Port Triggering

Certain applications, such as WAN network games, video conferences, and network calls, require multiple connections. Because of the firewall setting, these applications cannot work on a simple NAT router. However, certain special applications enable the applications to work on an NAT router. When an application sends a connection request to a trigger port, the corresponding ports are open for later connection and service provision.

Choose Network Application > Port Triggering and the Port Triggering page is displayed.

Enable Port Triggering: If Enable Port Triggering box is not checked, all port triggering function will be disabled.

Port Triggering Timeout: The timeout value controls the inactive timer at the specified ingress port. Upon timeout of the inactive timer, the ingress port is disabled.

Click the Add Service button and the Port Triggering – Services page is displayed:

Service Name: Enter a service name.

Service User:

Any: Allow everybody in the user network to use the service.

Single address: Enter the IP address of the network adapter on the PC. Then, the service is applied only on the specific network adapter of the PC.

Service Type: The protocol used at the triggering port. You can select TCP/UDP, TCP, or UDP.

Triggering Starting Port: The first port to which an application sends a connection request. All relevant ports can be open only after connection is established at this starting port. Otherwise, other relevant ports are not open.

Triggering Ending Port: Set the end port of the triggering port range.

Starting Port: The starting port of the port range.

Ending Port: The ending port of the port range. After finishing settings, click Apply to add a port triggering rule.

UPnP

☐ Turn UPnP On

Advertisement Period(in minutes)

Advertisement Time To Live(in hops)

UPnP Portable Table

Active	Protocol	Int. Port	Ext. Port	IP Address	Description

9.4.3 UPnP

By using the Universal Plug and Play (UPnP) protocol, a host in the LAN can ask the router to perform specific port conversion, to enable an external host to access resources on the internal host when necessary. For example, if MSN Messenger is installed on Windows ME and Windows XP operating systems, UPnP can be used for audio and video conversions. In this way, functions restricted by NAT can work properly. Choose Network Application > UPnP and the UPnP page is displayed.



Turn UPnP On: If selected, UPnP is enabled.

Advertisement Period (in minutes): Set the broadcast interval. It indicates the interval for the router broadcasting its UPnP information. The value should be in the range of 1 to 1440 minutes and the default is 30 minutes.

Advertisement Time To Live (in hops): The time for the broadcast to live. It is the number of hops after each UPnP packet is sent. The number of hops is the times that each packet can be broadcast before it vanishes. The value is in the range of 1 to 255 hops and the default is 4 hops.

UPnP Portable Table: This table shows the IP addresses of UPnP devices that are connected to the router and open (internal and external) ports on the devices. It also lists the types and status of the open ports.

Note: Only applications that support UPnP can use the UPnP function. The functionality of UPnP requires support by the application and operating systems such as Windows ME, Windows XP, and Windows Vista.

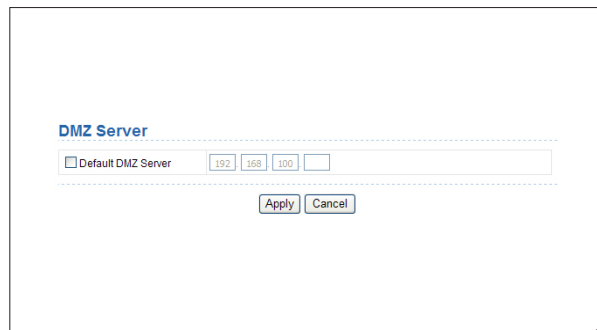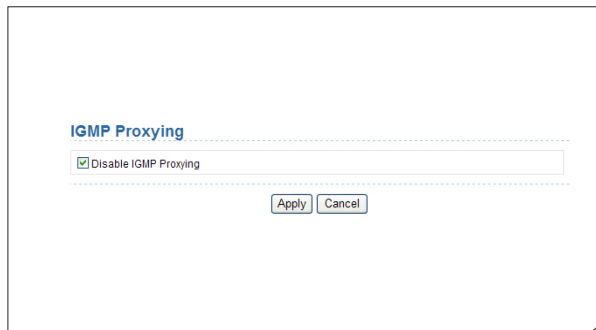

9.4.4 IGMP Proxying

Click Network Application > IGMP Proxying and the IGMP Proxying page is displayed.

Enable IGMP proxying: IGMP proxying enables a PC in the LAN to receive desired multicast traffic from the Internet. Disable IGMP proxying if you do not need this function.

After finishing the setting, click Apply to apply the setting.


9.4.5 DMZ Server

DMZ (Demilitarized Zone), a special network zone that is different from the external network or the internal network. Servers that are allowed to access the external network, such as Web and e-mail, connect to the DMZ. The internal network is protected behind the Trust Zone interface, and is not allowed any user to access. Therefore, the internal and

external networks are separated, which can meet user's secrecy demand. Usually, there are some public servers in DMZ, such as Web, Mail, and FTP. Users from the external network can access services in DMZ, but they cannot obtain the company's secret information or personal information that is stored on the internal network. Even though servers in the DMZ are damaged, it does not cause secret information loss on the internal network.

Choose Network Application > DMZ Server and the DMZ Server page is displayed.

Default DMZ Server: Enter the IP address of a PC that serves as the DMZ server.

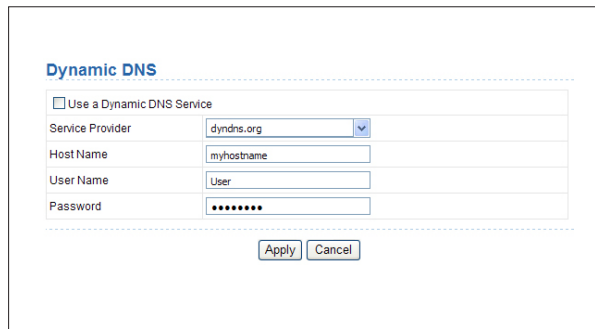

The screenshot shows a 'Dynamic DNS' configuration window. At the top, the title 'Dynamic DNS' is in blue. Below it is a checkbox labeled 'Use a Dynamic DNS Service'. Under this checkbox are four input fields: 'Service Provider' with a dropdown menu showing 'dyndns.org', 'Host Name' with the text 'myhostname', 'User Name' with the text 'User', and 'Password' with masked characters '*****'. At the bottom of the form are two buttons: 'Apply' and 'Cancel'.

9.4.6 Dynamic DNS

Dynamic domain name resolution (DDNS) is mainly used to achieve resolution between fixed domain names and dynamic IP addresses. For a user that uses a dynamic IP address, after the user obtains a new IP address in the Internet access, the dynamic domain name software installed in the host sends the IP address to the DDNS server provided by the DDNS service provider and updates the domain name resolution database. When another user on the Internet tries accessing the domain name, the dynamic domain name resolution server returns the correct IP address.

Choose Network Application > Dynamic DNS and the Dynamic DNS page is displayed.

Use a Dynamic DNS Service: If you have registered with a DDNS service provider, select Use a Dynamic DNS Service.

Service Provider: Select your DDNS service provider.

Host Name: Enter the host name or domain name provided by your DDNS service provider.

User Name: Enter the name of your DDNS account.

Password: Enter the password of the DDNS account.

After finishing the settings, click Apply to apply the settings

Static Routes

Max of rules: 32

#	Active	Name	Destination	Gateway
<div> <div>Add</div> <div>Edit</div> <div>Delete</div> </div>				

Static Routes

Active ☐

Route Name

Destination IP Address

IP Subnet Mask

Gateway IP Address

Metric

Apply

Cancel

9.4.7 Static Routes

Static routing is a special type of routing that can be applied in a network to reduce the problem of routing selection and data flow overload caused by routing selection so as to improve the packets forwarding speed. You can set the destination IP address, subnet mask, and gateway to specify a routing rule. The destination IP address and subnet mask determine a destination network or host to which the router sends packets through the gateway.

Choose Network Application > Static Routes and the Static Routes page is displayed.

Click Add to add a static routing rule.

Active: The static routing rule can take effect only if the Active check box is selected.

Route Name: Enter the name of the static route.

Destination IP Address: The destination address or network that you want to access. This IP address cannot be in the same network segment as the IP address of the WAN or LAN interface of ISY Wireless Range Extender.

IP Subnet Mask: This IP subnet mask together with the destination IP address identify the target network.

Gateway IP Address: The IP address of the next node to which packets are sent. The gateway IP address must be in the same network segment as the IP address of the WAN or LAN interface of ISY Wireless Range Extender.


Metric: The number of other routers in the user network. The value ranges from 2 to 15. Usually, the value of 2 or 3 leads to the best performance. If the route is direct connection, set Metric to 2. After finishing settings, click Apply to save the settings.



9.5 Security Options

Click Security Options and the extended navigation menu is shown as follows:

Click a submenu to perform specific parameter configurations.

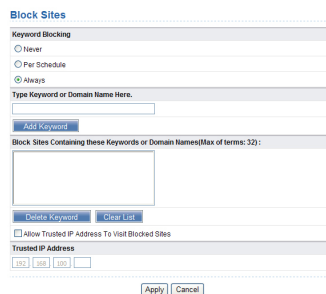

9.5.1 Block Sites

ISY Wireless Range Extender allows you to restrict access based on WEB addresses and WEB address keywords. When a user tries accessing a restricted website, a message is displayed, indicating that the firewall restricts access to the website.

Choose Security Options > Block Sites and the Block Sites page is displayed.

To block access to Internet sites:

Step 1 Select Per Schedule or Always to enable keyword blocking. To block by schedule, be sure to specify a time period in the Schedule page. For more information about scheduling, refer to section 8.8.3 "Schedules".

Step 2 Enter keywords or domain names that you want to block in the keyword field and click Add Keyword. The keyword or domain name then appears in the Block Sites Containing these Keywords or Domain Names list. Keyword application examples:

If the keyword XXX is specified, the URL www.aabbcc.com/xxx.html is blocked.

If the keyword .com is specified, only websites with other domain suffixes (such as .edu, .org, or .gov) can be accessed.

Step 3 You can specify one trusted user, which is a computer that has no restriction in network access. To specify a trusted user, enter the computer's IP address in the Trusted IP Address field and select the Allow Trusted IP Address To Visit Blocked Sites check box. Since the trusted user is identified by IP address, you should configure that computer with a fixed IP address.

Step 4 Click Apply to save the settings.

Block Services

Services Blocking

☒ Never
☐ **Block List** Per Schedule
☐ **Block List** Always

Block Service Rules Table - Black List
 Max of rules: 32

#	Service Name	Port	IP
<div>Add Edit Delete</div>			

Block Service Rules Table - White List
 Max of rules: 32

#	Service Name	Port	IP
<div>Add Edit Delete</div>			

Apply

Cancel

Block Services Setup

Service Type User Defined

Protocol TCP

Starting Port (1-65535)

Ending Port (1-65535)

Service Type/User Defined

Filter Service For:

☐ Only This IP Address: 192.168.1.1
☐ IP Address Range: 192.168.1.1 to 192.168.1.1
☒ All IP Address:

Add

Cancel

9.5.2 Block Services

ISY Wireless Range Extender allows you to block the use of certain Internet services by computers on your network. Choose Security Options > Block Services and the Block Services page is displayed.

To specify a service for blocking:

- Step 1** Select Per Schedule or Always to enable keyword blocking. To block by schedule, be sure to specify a time period in the Schedule page. For more information about scheduling, refer to section 8.8.3 "Schedules".
- Black List: Indicates to prevent service that complies with the rule in the Block Service Rules Table-Black List area from being used.
 - White List: Indicates to allow only service that complies with the rule in the Block Service Rules Table-White List area to be available for use.
- Step 2** Click Add to specify a service for blocking. The Block Services Setup page is displayed:

Step 3 Set the parameters in this page.

Service Type: Select a service type. If your desired type is not in the list, select User defined. Then, you need to select the protocol, enter the service name, and specify the port range. For services that exist in the drop-down list, the corresponding information is already preset.

Protocol: Set the protocol used at service ports. If you are not sure about the protocol that the application uses, select TCP/UDP.

Starting Port/Ending Port: The starting and ending ports of the port range where the specified service is blocked. If the application uses a single port number, enter the number in both fields.

Service Type/User Defined: Enter the service name.

Filter Service For: You can block the specified service for a single computer, computers within an IP address range, or all computers. After finishing settings, click Add to add a new rule. Then, click Apply to save the settings.

The screenshot shows a web interface for router settings. At the top, the word "Protection" is displayed in blue. Below it, there are two checkboxes: "Disable Port Scan and DOS Protection" which is checked, and "Respond to Ping on Internet Port" which is unchecked. These are followed by a section titled "NAT Filtering" in bold. Under this section, there are two radio buttons: "Secured" which is selected, and "Open". At the bottom of the settings area, there are two buttons: "Apply" and "Cancel".

9.5.3 Protection

Choose Security Options > Protection and the Protection page is displayed.


Disable port scan and DoS protection: Denial of service (DoS) protection protects your LAN against DOS attacks. Generally, please enable the port scanning and DOS protection function.

Respond to Ping on Internet Port: If enabled, the router responds to ping commands from the Internet. However, like the DMZ server, enabling this function can bring about security risks. Generally, please disable this function.

NAT Filtering: NAT filtering determines the way that the router deals with incoming traffic.

Secured: This option provides a secured firewall to protect PCs on LAN from attacks from the Internet, but it may not allow some Internet games, point-to-point applications, or multimedia applications to work.

Open: This option provides a less secure firewall that allows almost all Internet applications to work. After finishing the settings, click Apply to apply the settings.

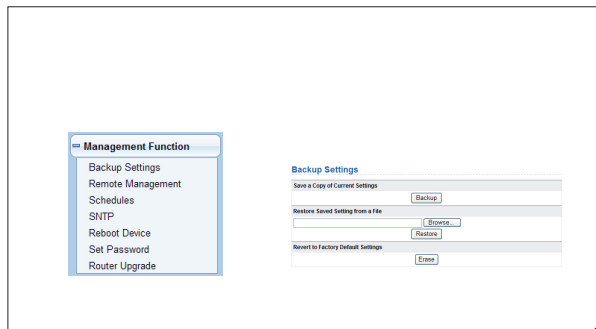

9.6 Management Function

Click Management Function and the extended navigation menu is shown as follows.

Click a submenu to perform specific parameter configurations.

9.6.1 Backup Settings

Choose Management Function > Backup Settings and the Backup Settings page is displayed. In this page, you can export configuration information of the router to the computer in the form of XML for later use, import a previously saved or a new configuration file, and restore the factory default settings of the router.

Backup: Click Backup and save configuration information of the router as a local file.

Note: Before saving your configuration file, change the administrator password to the default (admin) in case you forget your password. Then change it again after you have saved the configuration file. If you forget the password, you will need to reset the configuration to factory defaults.

Restore: The Backup and Restore options in the Backup Settings page let you save and retrieve a file containing your router's configuration settings. Click Browse... to select the configuration file restored in your computer and click Restore to load the file to the router.

Erase: Under some circumstances (for example, if you move the router to a different network or if you have forgotten the password) you might want to erase the configuration and restore the factory default settings. Click Erase to restore the factory default settings of the router. This operation has the same effect as pressing the Reset button on the side panel for 3-6 seconds.

Remote Management

☐ Turn Remote Management On

Remote Management Address : http://0.0.0.0:8080

Port Number : 8080

Allow Remote Access By :

☐ Only This Computer :

☐ IP Address Range : From To

☒ Everyone

Apply Cancel

9.6.2 Remote Management

The remote management function allows you to configure the router from the WAN through the Web browser. In this way, you can manage the router on a remote host.

Choose Management Function > Remote Management and the Remote Management page is displayed.

Turn Remote Management On: If selected, you can perform remote Web management for the router from the WAN.

Remote Management Address: IP address that is used to access the router from the Internet. The default is http://0.0.0.0:8080. When accessing the router, you need to enter an address in the form of "the WAN IP address of the router" + ":" + "the port number" in the IE address bar. For example, if your external address is 10.0.0.123 and the used port number is 8080, enter 10.0.0.123:8080 in your browser.

Port Number: The port number for accessing the router through remote Web management.

Allow Remote Access By: Set the IP address of the computer on which remote Web management is carried out to access the router.

Only This Computer: Only the specified IP address can access the router.

IP Address Range: A range of IP addresses on the Internet can access the router. You need to enter the starting and ending IP addresses to specify a range.

Everyone: Everyone on the Internet can access the router. After finishing settings, click Apply to save the settings.

Schedule

Days to Block:

☒ Every Day

☒ Sunday

☒ Monday

☒ Tuesday

☒ Wednesday

☒ Thursday

☒ Friday

☒ Saturday

Time of day to Block (use 24-hour clock)

☒ All Day

Start Blocking: 00 Hour 00 Minute

End Blocking: 23 Hour 59 Minute

Apply Cancel

9.6.3 Schedules

Choose Management Function > Schedules and the Schedule page is displayed.

If you already set site filtering in the Block Sites page or set service filtering in the Block Services page, you can set a schedule to specify the time and mode of restricting Internet access.

Days to Block: Select days on which you want to apply blocking by selecting the appropriate check boxes. Select Every Day to select the check boxes for all days.

Time of Day to Block:

All Day: To perform 24-hour blocking.

Start Blocking/End Blocking: If you want to restrict access in a fixed period during the days you specify, enter the start and end time in 24-hour format. After finishing settings, click Apply to save the settings

SNTP

Time Setting

☐ Automatically synchronize with Internet time servers

First NTP time server: 210.72.145.44

Second NTP time server:

Time Configuration

Current Router Time: 1971-01-01 13:03:51

Time Zone: (GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi

☐ Enable Daylight Saving

Daylight Saving Offset: 0:00

Month	Week	Day
Apr	2nd	Sun
Sep	2nd	Sun

Daylight Saving Dates:
(Time interval must be greater than five days of start month)

Start: Apr 2nd Sun

End: Sep 2nd Sun

Apply Cancel

9.6.4 SNTP

Choose Management Function > SNTP and the SNTP page is displayed. SNTP refers to Simple Network Time Protocol. In this page, you can set time information of your router. It is strongly recommended to set the correct time on the router first. This ensures proper functioning of log, site blocking, and schedule because their time settings are based on time information in this page.

Automatically synchronize with Internet time servers: If selected automatic synchronization with the network time server is enabled.

First NTP time server: Enter the IP address of the primary NTP server. The NTP server is a network time server that is used to synchronize the time of computers on the Internet. When you set the first NTP time server, the router obtains GMT time from the specified NTP server with

priority after it is connected to the Internet.

Second NTP time server: Enter the IP address of the secondary NTP server if available.


Current Router Time: Display the current system time of the router.

Time Zone: Select the time zone where you are located.

Enable Daylight Saving: Enable or disable daylight saving time (DST).

Daylight Saving Offset: Select a proper offset. If it is set to +1:00, 10:00 in the morning in standard time becomes 11:00 in the morning in DST.


Daylight Saving Dates: Set the starting time and ending time of DST. After finishing settings, click Apply to save the settings.

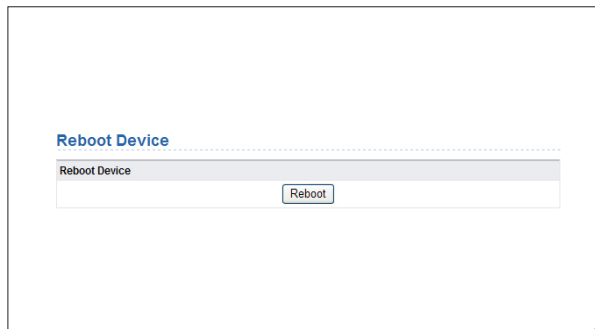

9.6.5 Reboot Router

Choose Management Function > Reboot Router and the Reboot Router page is displayed.

Click Reboot to reboot the router. After the router is rebooted, the system jumps to the login page.

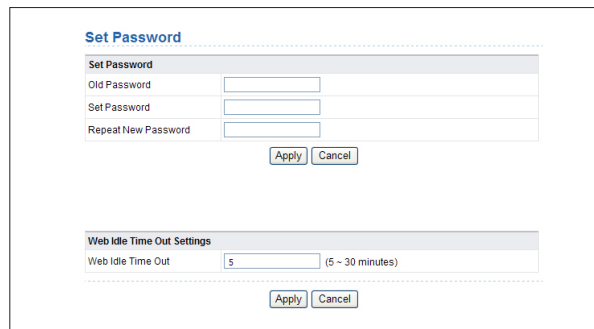


9.6.6 Set Password

Choose Management Function > Set Password and the Set Password page is displayed.

In this page, you can change the login password and set the page timeout time.

Note: For security, it is strongly recommended to change the default password of the administrator. If you forget the password, you can restore the router to the default settings. The default password is admin.

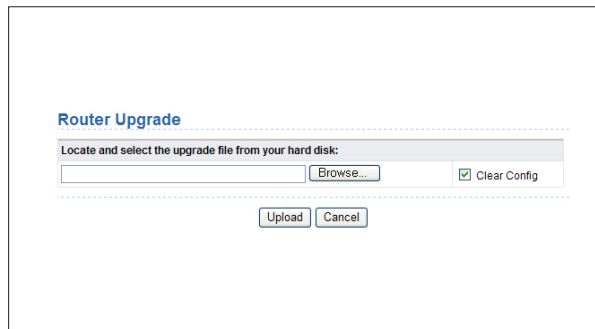

9.6.7 Router Upgrade

Choose Management Function > Router Upgrade and the Router Upgrade page is displayed.

Upgrade the software of the router in the following steps:

- Step 1** Click Browse... to navigate to the latest software.
- Step 2** Select the correct upgrade file. If you select Clear Config, the router restores to the default settings after upgrade. If you do not select it, the current settings remain.
- Step 3** Click Upload to start upgrade.

After the upgrade is completed, the router automatically reboots.

Note: After the software upgrade, ISY Wireless Range Extender returns to the factory default settings. In case of losing the previous configuration information, please save settings before updating the software. Do not power off the router during the upgrade.

10. Web Configuration for the Wireless Universal Repeater Mode

10.1 Router Status

Choose Running Status > Router Status and the Router Status page is displayed.

In this page, you can view information about the current running status of ISY Wireless Range Extender, including system information, LAN port status, wireless client information, and wireless universal repeater status.

Router Status

System Info	
Hardware Version	V1.0.0
Firmware Version	V1.0.0
Product Name	Wireless Router
Work Mode	Repeater Mode
Time and Date	1971-01-01 08:18:34
LAN Port	
MAC Address	00:1E:E3:5B:DE:22
IP Address	192.168.100.254
IP Subnet Mask	255.255.255.0
Wireless Client	
Wireless Network Selected Name (SSID)	
Wireless Channel	Auto
Wi-Fi Protected Setup(WPS)	ON
Wireless Security Mode	None
Connect Status	Disconnected
Wireless Universal Repeater	
SSID of Extended Interface	Pocket-Repeater
Wireless Security Mode	None

Clients List

Wired Devices			
#	IP Address	MAC Address	Device Name
1	192.168.100.123	00:19:E0:23:C5:38	unknown
Wireless Devices(Wireless intruders also show up here)			
#	IP Address	MAC Address	Device Name

[Refresh](#)

Repeater Mode Settings

There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or UR Mode.

Please choose your repeater mode as follows:

☐ WDS Mode

☒ Wireless Universal Repeater Mode

[Apply](#) [Cancel](#)

10.1.2 Clients List

Choose Running Status > Clients List and the Clients List page is displayed.

This page displays information of devices connected to ISY Wireless Range Extender, including the IP address, device name, and MAC address of each device.

10.2 Setup Wizard

For settings, refer to section 6.1 "Repeater Mode Configuration".

10.3 Repeater Mode Setting

Click Repeater Mode Settings and the Repeater Mode Settings page is displayed. Select Wireless Universal Repeater Mode.

Wireless Universal Repeater

SSID of Extended Interface :

Security Options

Security Options :

10.4.1 WPS Setup

WPS refers to Wi-Fi Protected Setup.

You can use WPS to establish wireless connection in a quick and secure way if the uplink AP or terminal (for example, the network adapter) has the WPS function. It is suggested to first configure wireless encryption for the uplink AP. If you change the wireless encryption mode after having establishing wireless connection using WPS, you must use WPS to establish wireless connection again. Note that if the wireless client does not support WPS you must manually configure the wireless client (such as SSID, security mode, and password) to make it have the same SSID and wireless security settings as the router.

In the Repeater mode with WDS disabled, ISY Wireless Range Extender can perform WPS encrypted connection to both the uplink AP and the downlink client device. The following describes how to configure WPS for the Repeater mode.

10.4. Wireless Universal Repeater

In universal repeater mode, ISY Wireless Range Extender acts as the AP and client simultaneously.

Choose Wireless Settings > Wireless Universal Repeater and the Wireless Universal Repeater page is displayed.

SSID of Extended Interface: Set the SSID of the repeater.

Security Options: Set the security encryption mode for the repeater. It is recommended to configure the repeater with the same encryption mode as that of its uplink AP. After finishing settings, click Apply to save the settings.

10.4.1.1 Using the WPS Button

WPS connection to the uplink AP

In the Repeater mode with WDS disabled, press the WPS button on the side panel of ISY Wireless Range Extender in 3 seconds and release it. And press the WPS button on the uplink AP. Then they can start WPS session.

WPS connection to the downlink client device

In the Repeater mode with WDS disabled, press the WPS button on the side panel of ISY Wireless Range Extender for 3-10 seconds and release it. And press the WPS button on the client device. Then they can start WPS session.

Note: The SSID, authentication and pre-shared key for ISY Wireless Range Extender will automatically change to the same as those of its uplink AP after ISY Wireless Range Extender succeeds in connecting to the uplink AP through the WPS button mode.

WPS

As AP, Select a setup method:

☒ PBC mode (recommended)

You can either press the PBC Button physically on the device or press the Button right (soft PBC Button). Start PBC

☐ PIN (Personal Identification Number)

As Client, Select a setup method:

☒ PBC mode (recommended)

You can either press the PBC Button physically on the device or press the Button right (soft PBC Button). Start PBC

☐ PIN (Personal Identification Number)

☒ Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

WPS Setup

As AP, Select a setup method:

☒ Push Button (recommended)

You can either press the Push Button physically on the router or press the Button below (soft Push Button). Start PBC

☐ PIN (Personal Identification Number)

As Client, Select a setup method:

☒ Push Button (recommended)

You can either press the Push Button physically on the router or press the Button below (soft Push Button). Start PBC

☐ PIN (Personal Identification Number)

10.4.2 Using the Web Page


You can perform WPS settings using the Web page for configuration. Choose Wireless Settings > WPS Setup to display the WPS Setup page.

As an AP


You can perform WPS settings using the Web page for configuration. Choose Wireless Settings > WPS Setup to display the WPS page.

PBC mode

Step 1 Select Push Button and click Start PBC. WPS encrypted connection starts.

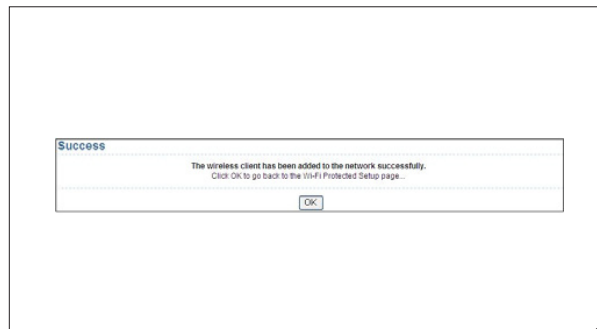


Step 2 Press the WPS button on the network adapter or click the PBC button in the network adapter configuration tool within 2 minutes to start WPS connection. After WPS connection is established, the following page is displayed, indicating that the WPS connection is completed.

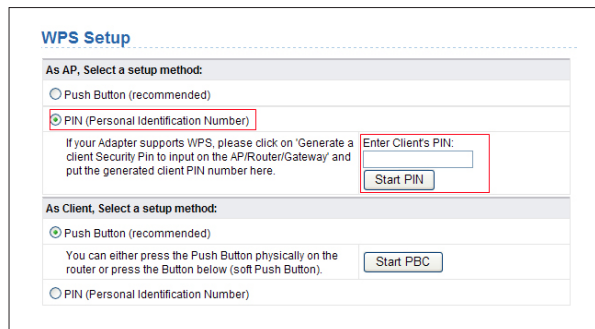


PIN mode

Step 1 Select PIN, enter the PIN code of the network adapter (refer to the client of the network adapter), and click Start PIN to start WPS connection.

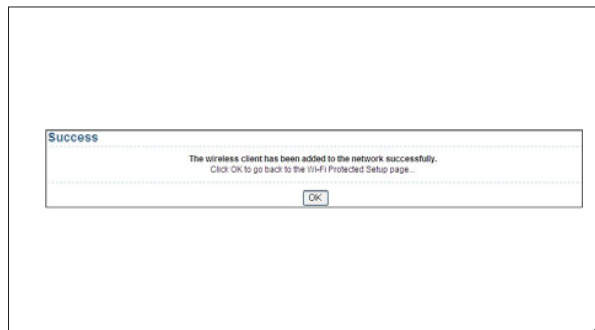

Step 2 Click the PIN button on the network adapter within 2 minutes to start WPS connection. After WPS connection is established, the following page is displayed, indicating that the WPS connection is completed.

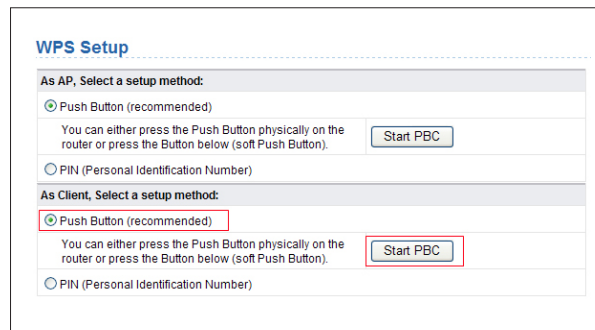

As a client


You can perform WPS settings using the Web page for configuration. Choose Wireless Settings > WPS to display the WPS page.

PBC mode

Step 1 Select Push Button and click Start PBC. WPS encrypted connection starts.



Step 2 Start the WPS PBC process. After WPS connection is established, the following page is displayed, indicating that the WPS connection is completed.

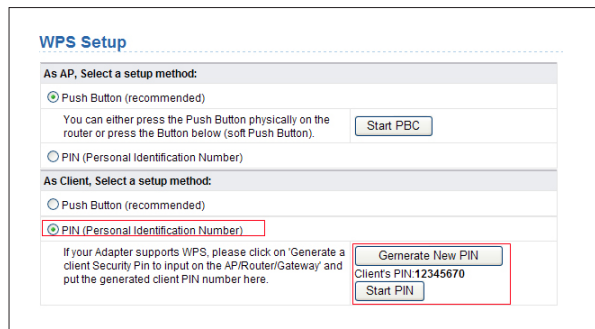

PIN mode

- Step 1** Select PIN, click Generate New PIN, and click Start PIN to start WPS connection.
- Step 2** Start the WPS PBC process within 2 minutes to start WPS connection. After WPS connection is established, a page is displayed, indicating that the WPS connection is completed.

Wireless Client Function

This page help you to configure the wireless client.

Step1: Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later; you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned :4

Site Survey List

#	SSID	MAC Address	Channel	Signal	Encrypt	Select
1	TWSZ_2B08	00:1F:A4:90:7A:5A	11	86%	WPA2-PSK(AES)	<input checked="" type="radio"/>
2	RTL867x-ADSL	00:05:1D:03:04:05	6	81%	None	<input type="radio"/>
3	WLAN_5C22	00:1E:E3:96:5C:2B	1	76%	WPA-PSK(AES/TKIP)	<input type="radio"/>
4	WLAN_0bdc	00:1E:E3:96:5C:2C	1	76%	None	<input type="radio"/>

Next

Wireless Client Function

This page help you to configure the wireless client.

Step1: Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later; you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned :3

Site Survey List

#	SSID	MAC Address	Channel	Signal	Encrypt	Select
1	Ralink_AP111	00:AA:BB:01:23:45	9	96%	None	<input checked="" type="radio"/>
2	yuanpeifeng	00:1E:E3:00:35:08	6	96%	None	<input type="radio"/>
3	test_2G	06:1F:6F:BE:87:1E	6	96%	None	<input type="radio"/>

Next

10.4.3 Wireless Client Function

Choose Wireless Settings > Wireless Client Function and the Wireless ClientFunction page is displayed.

Step 1

Click Site Survey to search for the wireless network you want to connect.

Step 2 Enter encryption information of the selected wireless network. Configure the client with the same security settings as the selected network. Click Next.

Step 3 ISY Wireless Range Extender provides the wireless roaming function if you select Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options. Click Finish. Then, the client can communicate with the selected network.

11 Web Configuration for the WDS Mode

11.1 Router Status

Choose Running Status > Router Status and the Router Status page is displayed.

In this page, you can view information about the current running status of ISY Wireless Range Extender, including system information, LAN port status, and wireless repeating information.

Router Status

System Info	
Hardware Version	V1.0.0
Firmware Version	V1.0.0
Product Name	Wireless Router
Work Mode	Repeater Mode
Time and Date	1971-01-01 09:02:07
LAN Port	
MAC Address	00:1E:E3:5B:DE:22
IP Address	192.168.100.254
IP Subnet Mask	255.255.255.0
Wireless Repeating	
Base Station Address	
Connect Status	Disconnected

Repeater Mode Settings

There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or UR Mode.

Please choose your repeater mode as follows:

☒ WDS Mode

☐ Wireless Universal Repeater Mode

Apply Cancel

WDS Function

☐ Disable Wireless Clients Association

Wireless MAC of this router: 00:1E:E3:42:15:35

Wireless Repeater

Repeater IP Address:

Basic Station MAC Address:

Apply Cancel

11.2 Setup Wizard

For settings, refer to section 6.4 "WDS Mode Configuration".

11.3 Mode Setting


Click Mode Settings and the Mode Settings page is displayed.
Select WDS Mode. Note that WDS function cannot be used if the channel is set to Auto.

Disable Wireless Clients Association: If selected, the repeater does not transmit any signals to clients that are connected to it. Generally, clear this check box. Generally, select this check box.

Security Options: Set the security encryption mode for the repeater. It is recommended to configure the repeater with the same encryption mode as that of its uplink AP. After finishing settings, click Apply to save the settings.

Repeater IP Address: Set the repeater's IP address different from the wireless basic station and other repeaters to avoid IP address conflict. We suggest setting IP addresses of the same network segment for the wireless basic station and repeaters.

Basic Station MAC Address: Enter the MAC address of the wireless basic station. After finishing settings, click Apply to save the settings. For WDS application description, refer to section 6.4.3 "WDS Application".

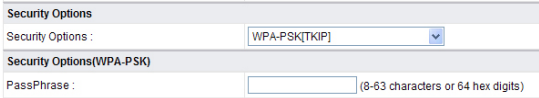


The screenshot shows a configuration window with two sections. The first section, titled "Security Options", contains a label "Security Options :" followed by a dropdown menu currently set to "WPA-PSK[TKIP]". The second section, titled "Security Options(WPA-PSK)", contains a label "PassPhrase :" followed by a text input field and a note in parentheses: "(8-63 characters or 64 hex digits)".

WPA-PSK[TKIP]

WPA-PSK: Preshared key Wi-Fi protection access TKIP: Temporal Key Integrity Protocol

Note that the 802.11n mode does not support the TKIP algorithm.

PassPhrase: Enter 8-63 ASCII characters or 64 hexadecimal digits

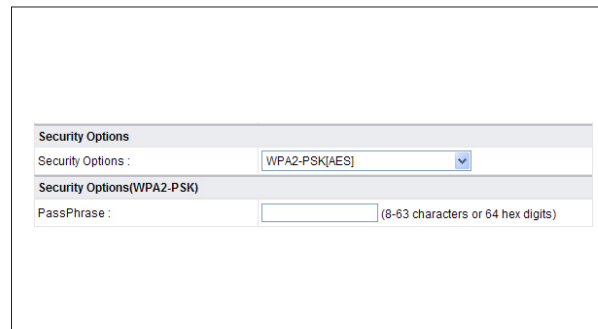

The screenshot shows a configuration window titled "Security Options". Inside, there is a section "Security Options :" with a dropdown menu set to "WPA2-PSK[AES]". Below this is another section "Security Options(WPA2-PSK)" containing a "PassPhrase :" label, an empty text input field, and a note "(8-63 characters or 64 hex digits)".

WPA2-PSK[AES]

WPA2-PSK: Preshared key Wi-Fi protection access version 2.

AES: Advanced Encryption Standard

PassPhrase: Enter 8-63 ASCII characters or 64 hexadecimal digits.

Note: After you complete configuring wireless settings for ISY Wireless Range Extender, only hosts that have the same wireless settings (for example, the SSID) as ISY Wireless Range Extender can connect to ISY Wireless Range Extender. If you configure security settings for ISY Wireless Range Extender, hosts must have the same security settings (for example, the password) as ISY Wireless Range Extender in order to connect to ISY Wireless Range Extender.

12 Web Configuration for the Client Mode


12.1 Router Status

Choose Running Status > Router Status and the Router Status page is displayed.

In this page, you can view information about the current running status of ISY Wireless Range Extender, including system information, LAN port status, and wireless client status.

Router Status


System Info	
Hardware Version	V1.0.0
Firmware Version	V1.0.0
Product Name	Wireless Router
Work Mode	Client Mode
Time and Date	1971-01-01 08:05:11
LAN Port	
MAC Address	00:1E:E3:5B:DE:22
IP Address	192.168.100.254
IP Subnet Mask	255.255.255.0
Wireless Client	
Wireless Network Selected Name (SSID)	
Wireless Channel	Auto
Wi-Fi Protected Setup(WPS)	ON
Wireless Security Mode	None
Connect Status	Disconnected

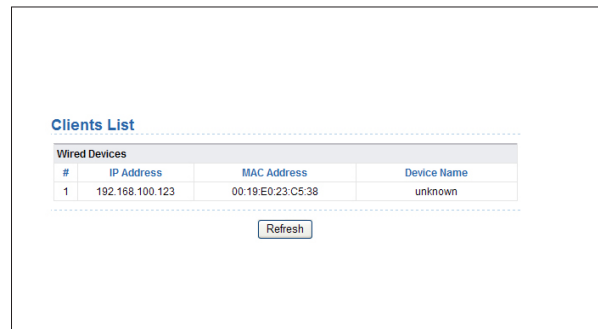

12.1.1 Clients List.

Choose Running Status > Clients List and the Clients List page is displayed.

This page displays information of wireless devices connected to ISY Wireless Range Extender including the IP address and MAC address of each device.

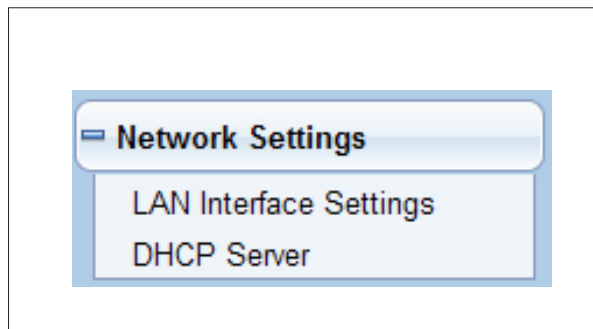

12.2 Setup Wizard

For settings, refer to section 6.5 "Client Mode Configuration".

12.3 Network Settings

Click Wired Network Settings and the extended navigation menu is shown as follows:

Click a submenu to perform specific parameter configurations.

12.4.1 WPS Setup

WPS refers to Wi-Fi Protected Setup.

You can use WPS to establish wireless connection in a quick and secure way if the uplink AP or terminal (for example, the network adapter) has the WPS function. It is suggested to first configure wireless encryption for the uplink AP. If you change the wireless encryption mode after having establishing wireless connection using WPS, you must use WPS to establish wireless connection again. Note that if the wireless client does not support WPS you must manually configure the wireless client (such as SSID, security mode, and password) to make it have the same SSID and wireless security settings as the router. The following describes how to configure WPS for the Client mode.

Using the WPS Button

In the Client mode, ISY Wireless Range Extender can perform WPS encrypted connection to either the uplink AP or the repeater.

Using the Web Page

You can perform WPS settings using the Web page for configuration. Choose Wireless Settings > WPS Setup to display the WPS Setup page.

PBC mode

Step 1 Select Push Button and click Start PBC. WPS encrypted connection starts.

WPS Setup

As Client, Select a setup method:

☒ Push Button (recommended)

You can either press the Push Button physically on the router or press the Button below (soft Push Button).

☐ PIN (Personal Identification Number)

Start PBC

Success

The wireless client has been added to the network successfully.
Click OK to go back to the Wi-Fi Protected Setup page.

OK

Step 2 Start the WPS PBC process. After WPS connection is established, the following page is displayed, indicating that the WPS connection is completed.

WPS Setup

As Client, Select a setup method:

☐ Push Button (recommended)

☒ PIN (Personal Identification Number)

If your Adapter supports WPS, please click on 'Generate a client Security Pin to input on the AP/Router/Gateway' and put the generated client PIN number here.

Generate New PIN

Client's PIN: 12345670

Start PIN



Success

The wireless client has been added to the network successfully.
Click OK to go back to the Wi-Fi Protected Setup page.

OK

PIN mode

- Step 1** Select PIN, click Generate New PIN, and click Start PIN to start WPS connection.
- Step 2** Start the WPS PBC process within 2 minutes to start WPS connection. After WPS connection is established, the following page is displayed, indicating that the WPS connection is completed.

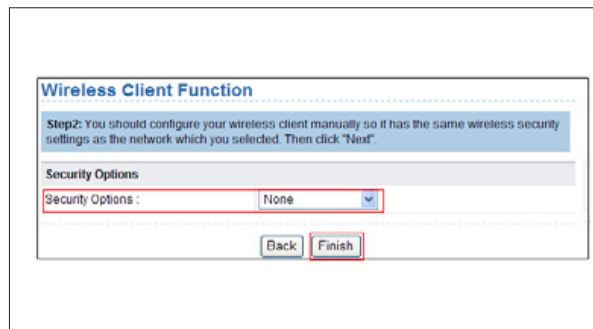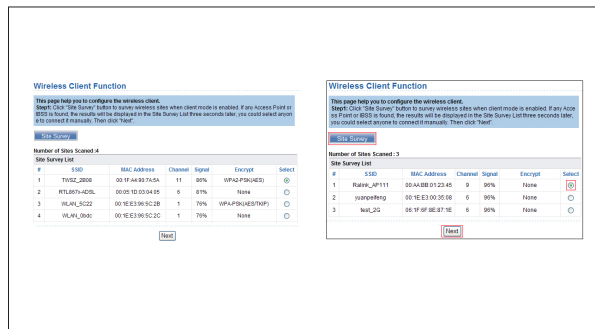

12.4.2 Wireless Client Function

Choose Wireless Settings > Wireless Client Function and the Wireless Client Function page is displayed.

Step 1 Click Site Survey to search for the wireless network you want to connect.

Step 2

Enter encryption information of the selected wireless network. Configure the client with the same security settings as the selected network. Click Finish. Then, the client can communicate with the selected network.

13 Appendix A FAQ

1 The wireless network adapter fails to search out wireless signals from ISY Wireless Range Extender.

When ISY Wireless Range Extender that is in the Client mode or in the Repeater mode but disconnected to the uplink AP does not support wireless client access and can be connected to through an Ethernet cable only. If the problem persists, causes may be that ISY Wireless Range Extender is far distant from the terminal device or obstacles placed between them block wireless signals. You can position ISY Wireless Range Extender in a closer distance from the terminal device, reduce obstacles between them, or add a wireless repeater. In addition, place microwave ovens, Bluetooth devices, and wireless phones that interrupt WLAN signals far away from WLAN devices.

2 The wireless network adapter fails to connect to ISY Wireless Range Extender.

Some early-version wireless network adapters may not support WPA2 authentication. You can set the authentication and encryption to WPA-AES, WPA-TKIP, or WEP.

3 ISY Wireless Range Extender in the Repeater or Client mode fails to connect to the uplink AP, for example, the domestic gateway, to access the Internet, or it frequently gets disconnected from the Internet.

Check that ISY Wireless Range Extender is in the wireless signal coverage of its uplink device. Click Site Survey in the Wireless Client Function page and check whether ISY Wireless Range Extender can search out strong wireless signals from the uplink AP

4 Wired connection to ISY Wireless Range Extender is abnormal

Check status of the Ethernet indicator on the ISY Wireless Range Extender. If the Ethernet indicator turns off, check whether the Ethernet cable is connected properly. If the problem persists, replace the Ethernet cable.

5 You cannot access the Internet.

Check whether the network adapter connected to the ISY Wireless Range Extender can automatically obtain an IP address. If it fails, enable DHCP for the domestic gateway or manually set the IP address of the network adaptor and DNS.

6 You fails to configure ISY Wireless Range Extender using the Web page.

Check whether the IP address of the network adapter and that of ISY Wireless Range Extender are in the same network segment. Manually set the IP address of your network adapter in the network segment of 192.168.100.2/253 according to procedures described in Chapter 5. Click the submenu to enter a specific configuration page. "Configuring Your Computer and Wireless Connection". Choose Network Settings > LAN Interface Settings and set the IP address of ISY Wireless Range Extender in the same network address as that of the domestic network gateway.

7 WPS connection fails.

Ensure that one and the only WPS device connected to ISY Wireless Range Extender starts the WPS session within 2 minutes. Note the WPS difference between ISY Wireless Range Extender serving as the uplink AP and that as the downlink client device in the Repeater mode (see section 9.5.2 "WPS Setup"). Refer to Table 4.1 for description on WPS indicator status.

EN

Wireless Range Extender

Extend the coverage of your existing Wi-Fi network

Speed: Up to 300Mbps Band: 2.4GHz

DE

WLAN Range Extender.

Erhöhen Sie die Reichweite Ihres vorhandenen WLANs

Geschwindigkeit: Bis zu 300Mbit/s Frequenzband: 2,4 GHz

IT

Range extender wireless

Estendi la copertura della tua rete Wi-Fi esistente

Velocità: Fino a 300 Mbps Banda 2,4 GHz

EL

Συσκευή επέκτασης εμβέλειας ασύρματου δικτύου

Επεκτείνετε την κάλυψη του υφιστάμενου Wi-Fi δικτύου σας

Ταχύτητα : Έως 300 Mbps Ζώνη: 2,4 GHz ασύρματο δίκτυο

ES

WiFi Range Extender

Expande la cobertura de su red WiFi

Velocidad: Hasta 300 Mbps Banda: 2,4GHz

FR

Amplificateur de signal sans fil

Étendez la portée de votre réseau wi-fi

Vitesse : Jusqu'à 300 Mbps Bande : 2,4 GHz

HU

Vezeték nélküli hálózathatóvító modul

Meglévő Wi-Fi hálózat hatótávolságának növelése Sebesség:

Maximum 300 Mbit/s Sáv: 2,4 GHz rendelkező készülék

Imtron GmbH

Wankelstraße 5,

D-85046 Ingolstadt.

NL

Draadloze range extender

Vergroot het bereik van uw huidige Wi-Fi-netwerk

Snelheid: Tot 300 Mbps Frequentieband: 2,4 GHz

PL

Urządzenie rozszerzające zasięg sieci bezprzewodowej

Do poszerzania zasięgu istniejącej sieci Wi-Fi

Prędkość: Do 300 Mb/s Pasmo: 2,4 GHz

PT

Range Extender sem fios

Expande a área de cobertura da rede Wi-Fi existente

Velocidade: Até 300 Mbps Banda: 2,4 Ghz

RU

Усилитель сигнала беспроводной сети

Увеличьте покрытие своей Wi-Fi сети

Скорость: До 300 Мбит/с Полоса: 2,4 ГГц

SV

Trådlös Range Extender

Utöka täckningen för ditt nuvarande trådlösa nätverk

Hastighet: Upp till 300 Mbit/s Band: 2,4 GHz

TR

Kablosuz Erim Geniřletici

Mevcut Wi-Fi ađının kapsama alanını geniřletin

Hız: 300 Mbps'ye kadar Bant: 2,4GHz

